



 
Aileron installation

step 01




Aileron installation

step 02

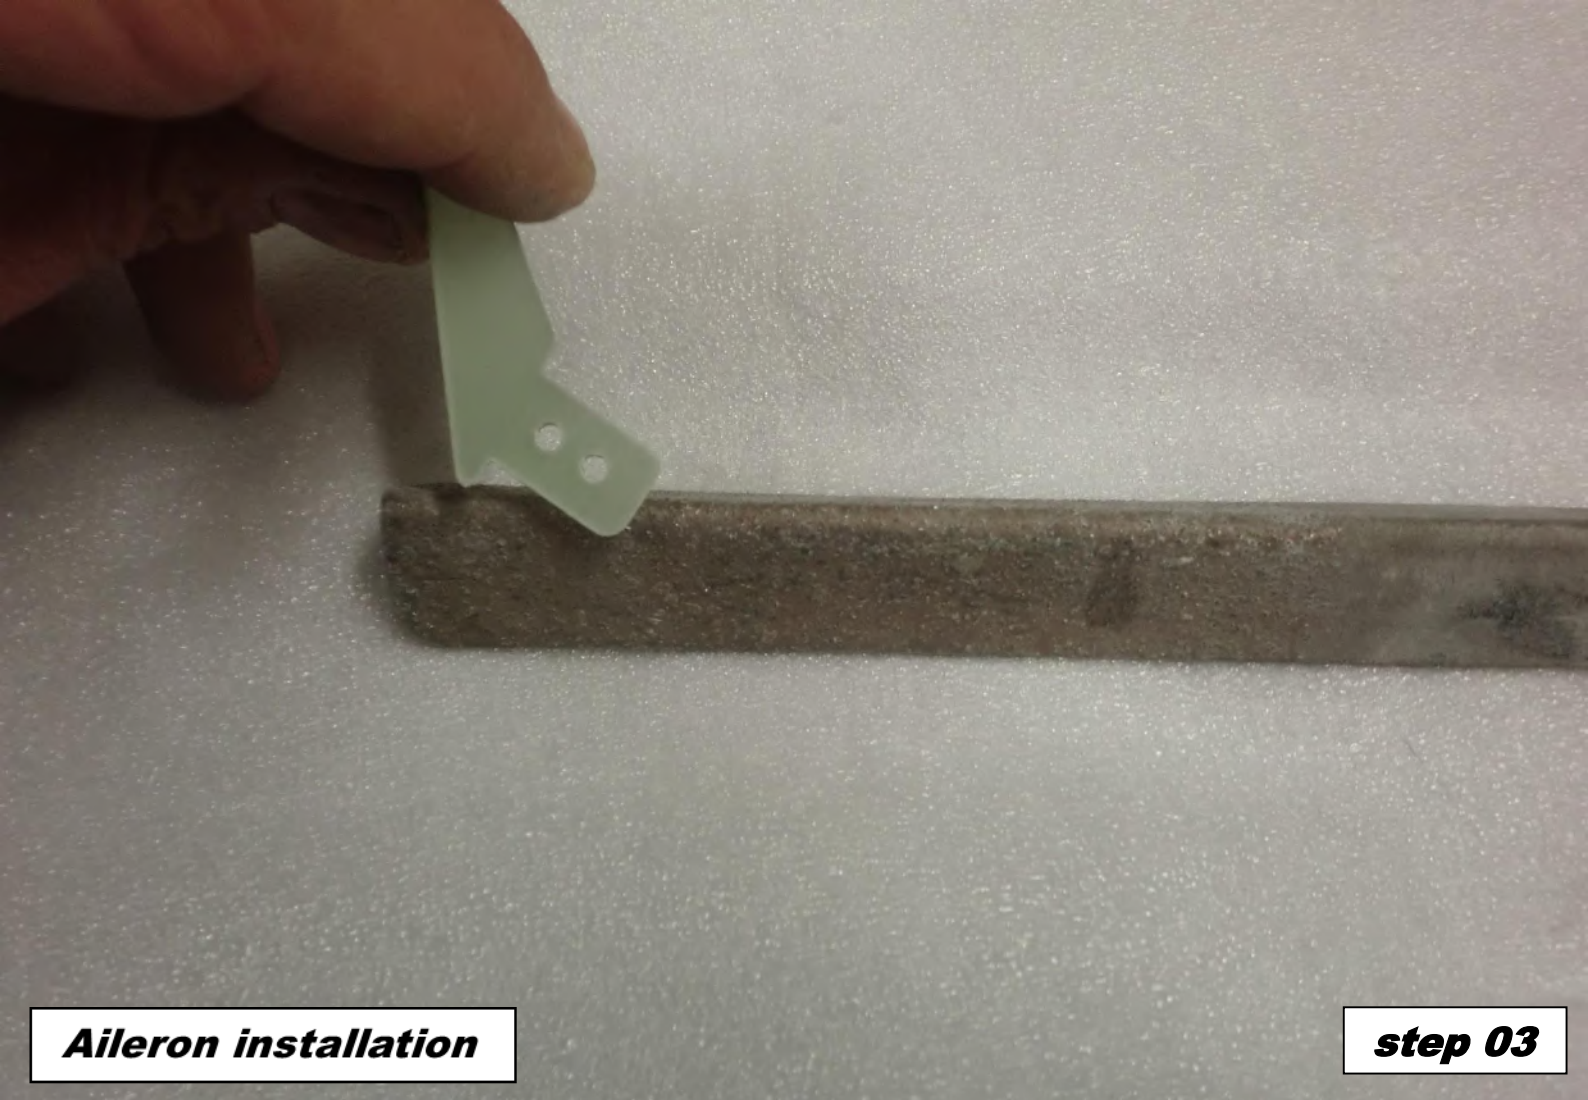

Aileron installation

 step 03

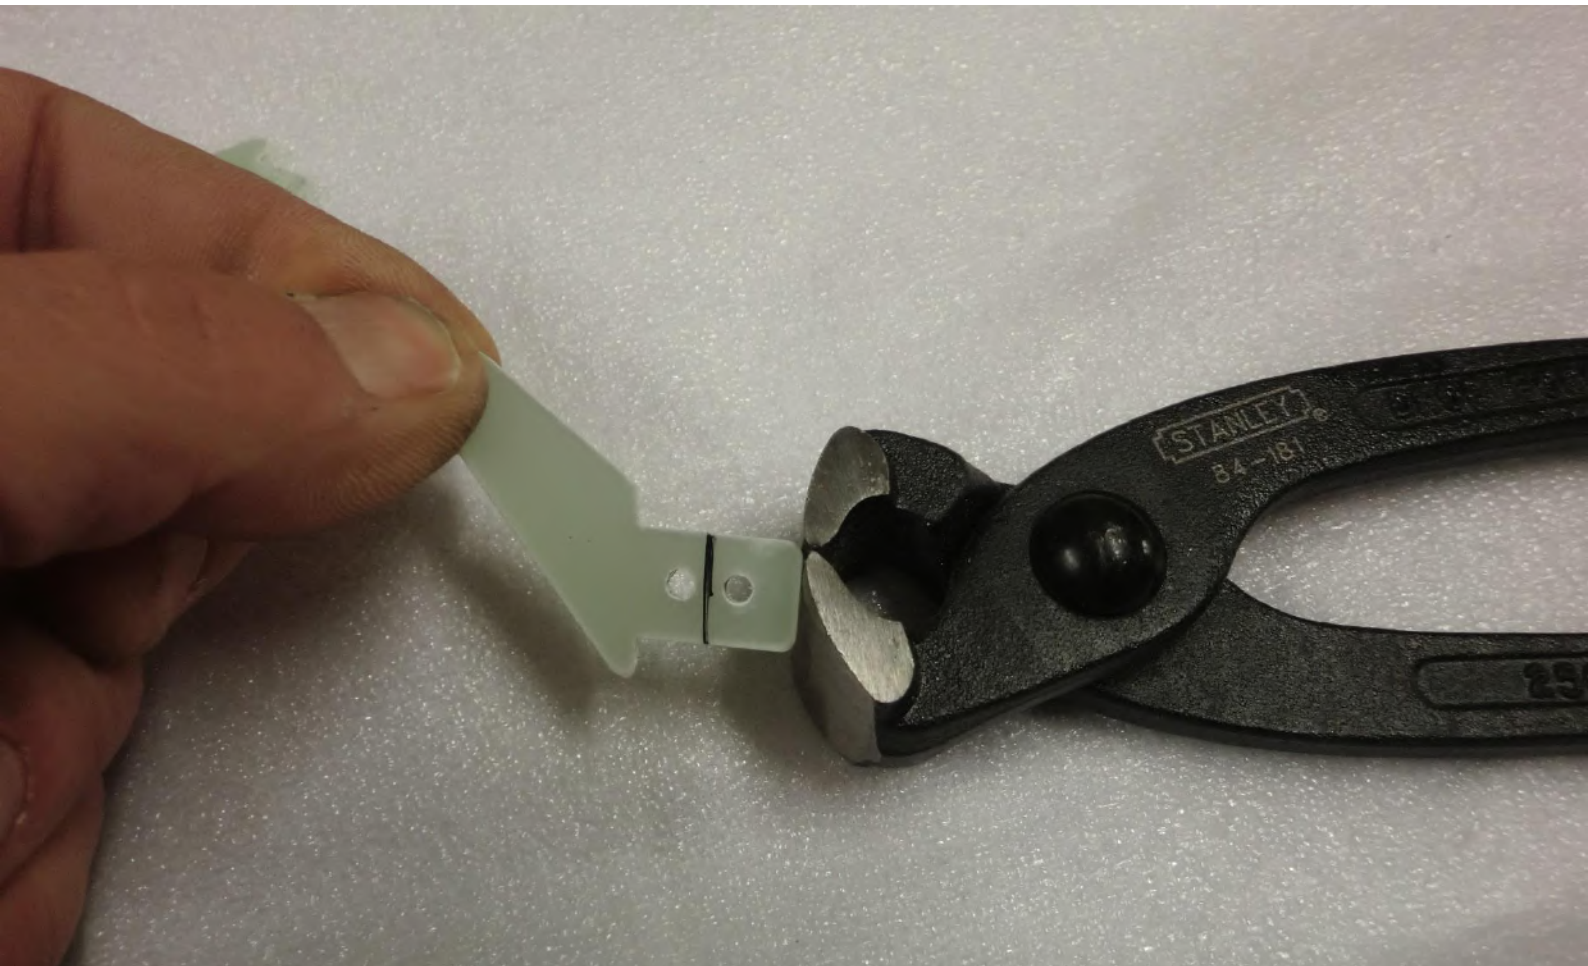


Aileron installation

step 04



Aileron installation

 step 05

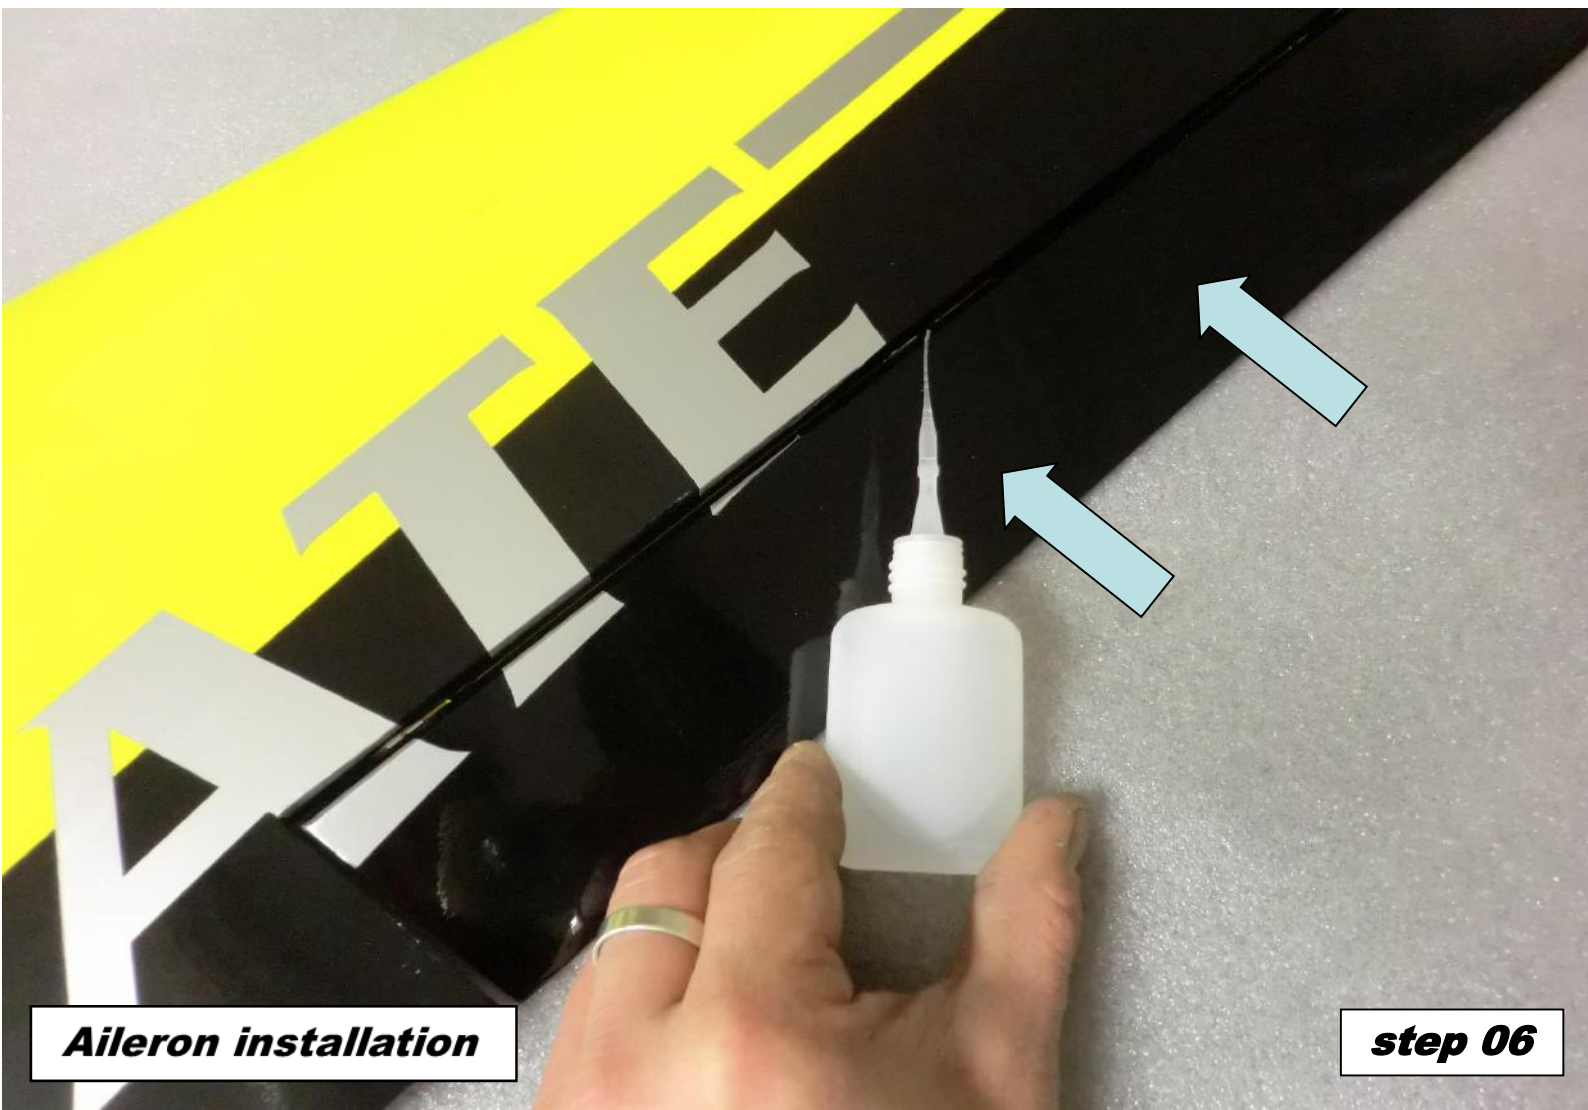

Aileron installation

step 06



 
Aileron installation

step 07



Aileron installation

step 08

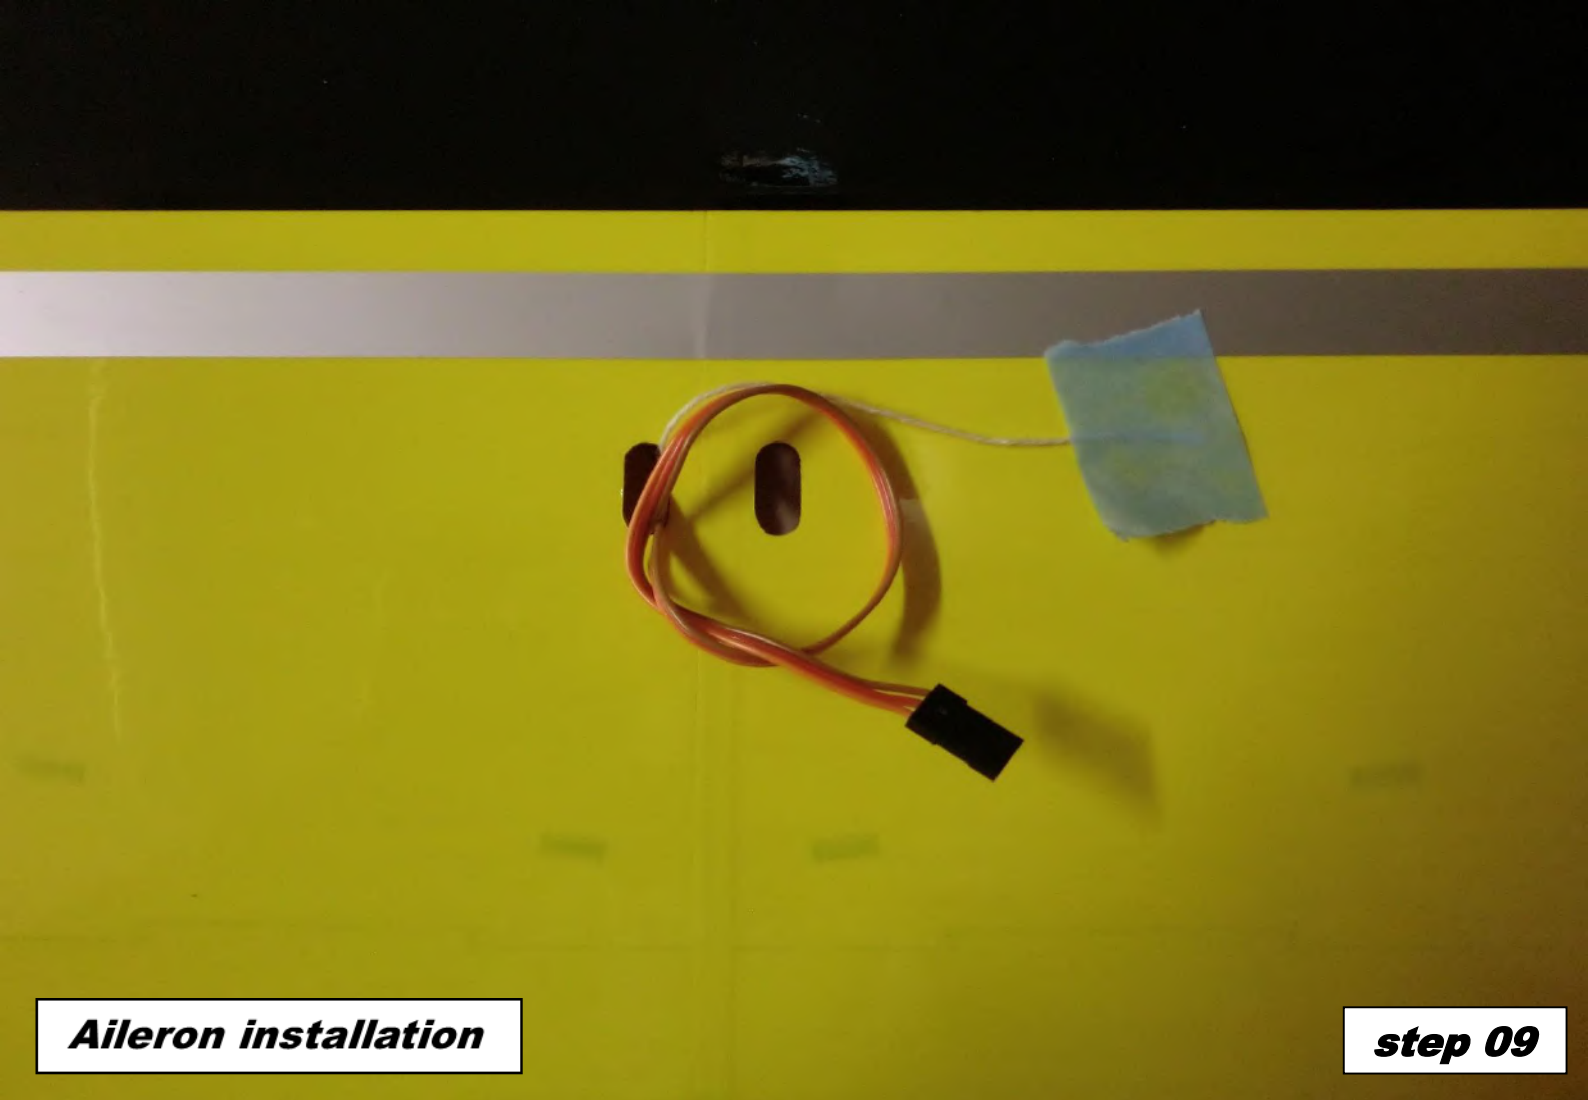



Aileron installation

step 09



Aileron installation

  step 10

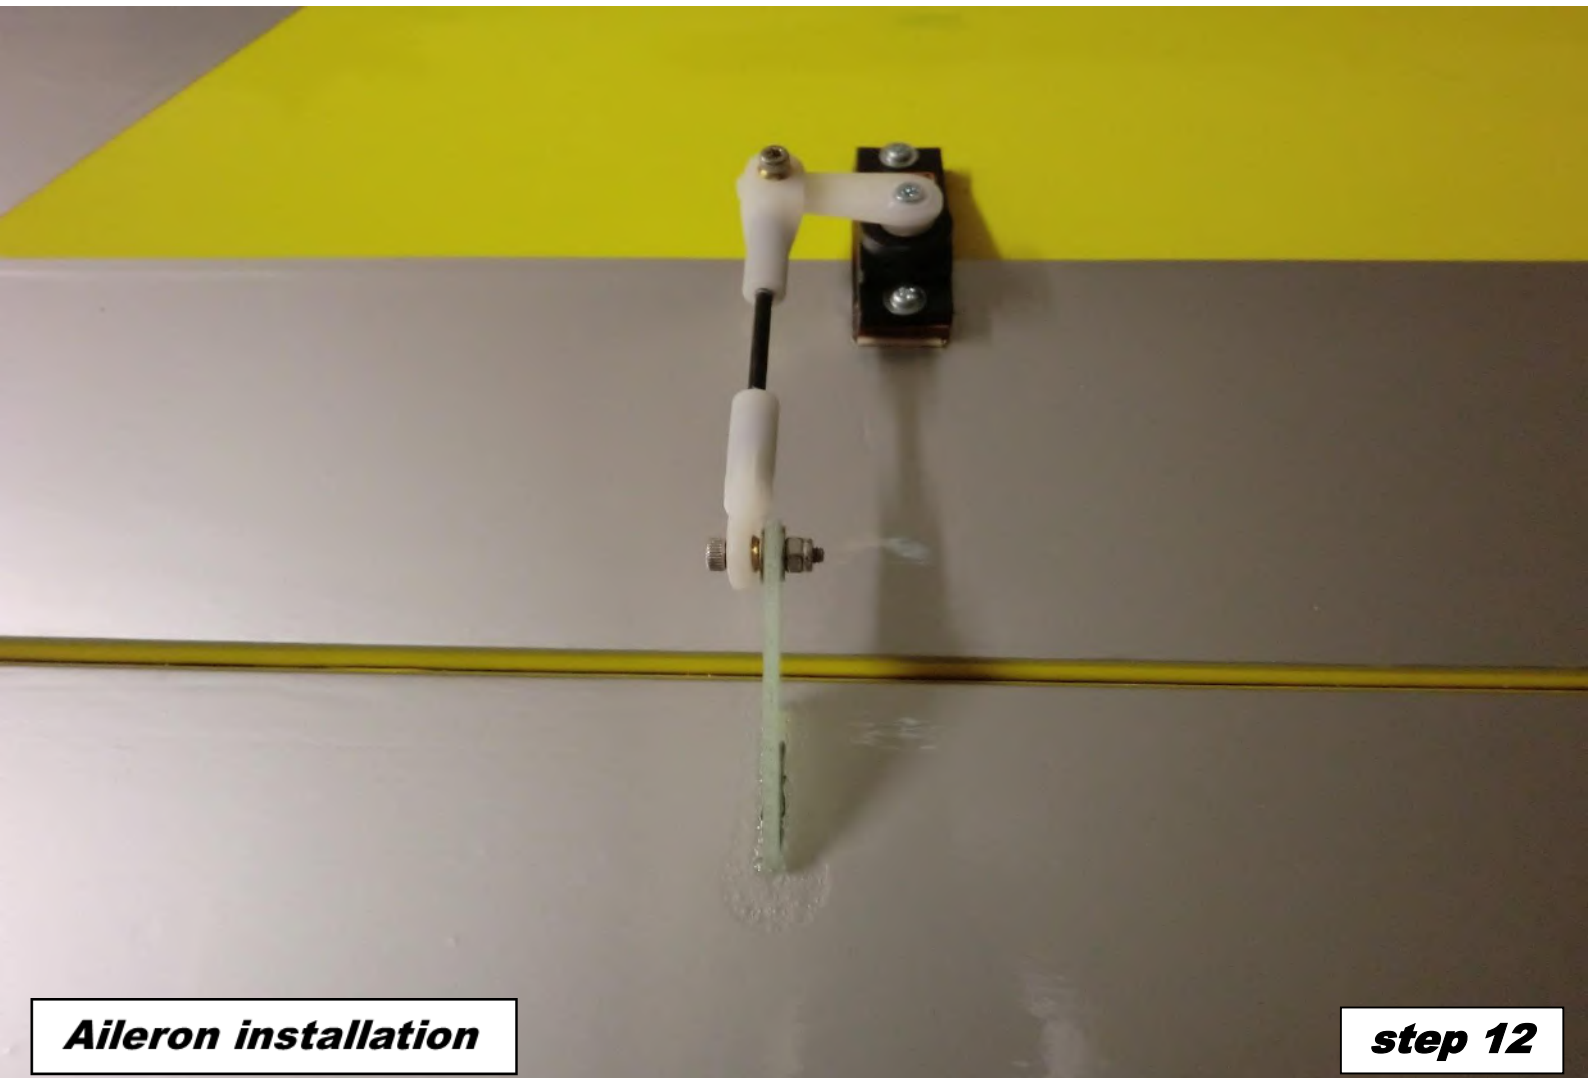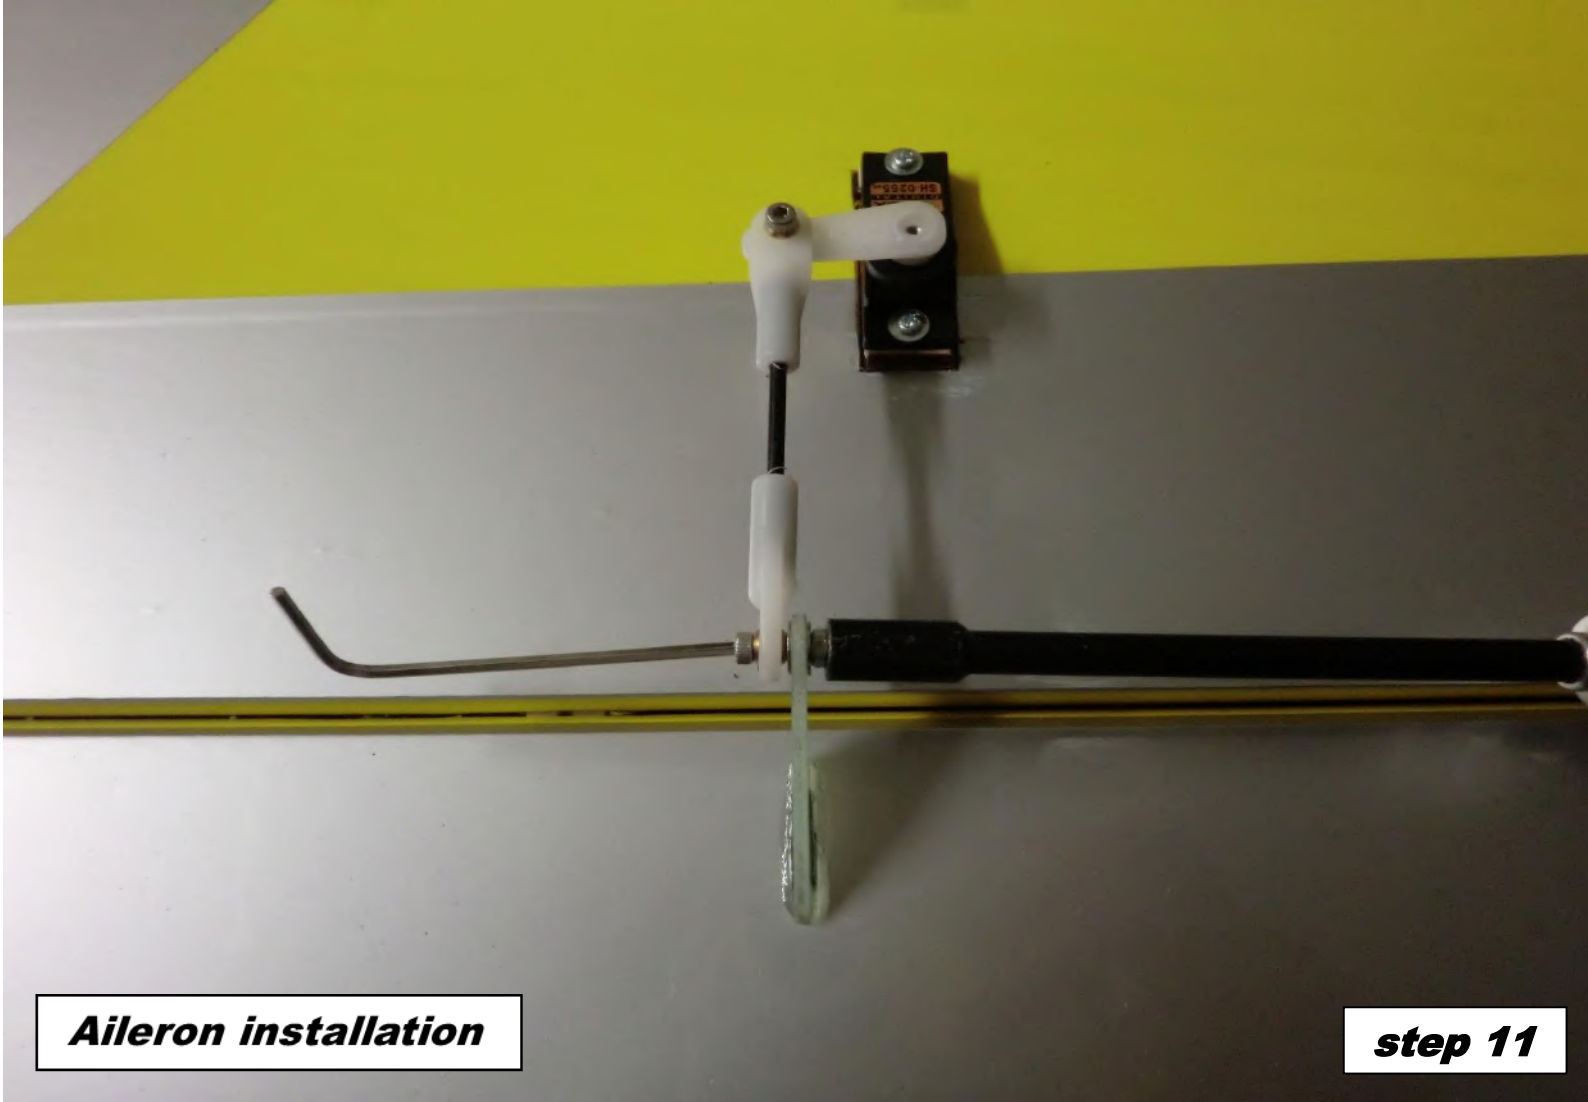


INSTALL BOTTOM WING




Struts installation

 step 13

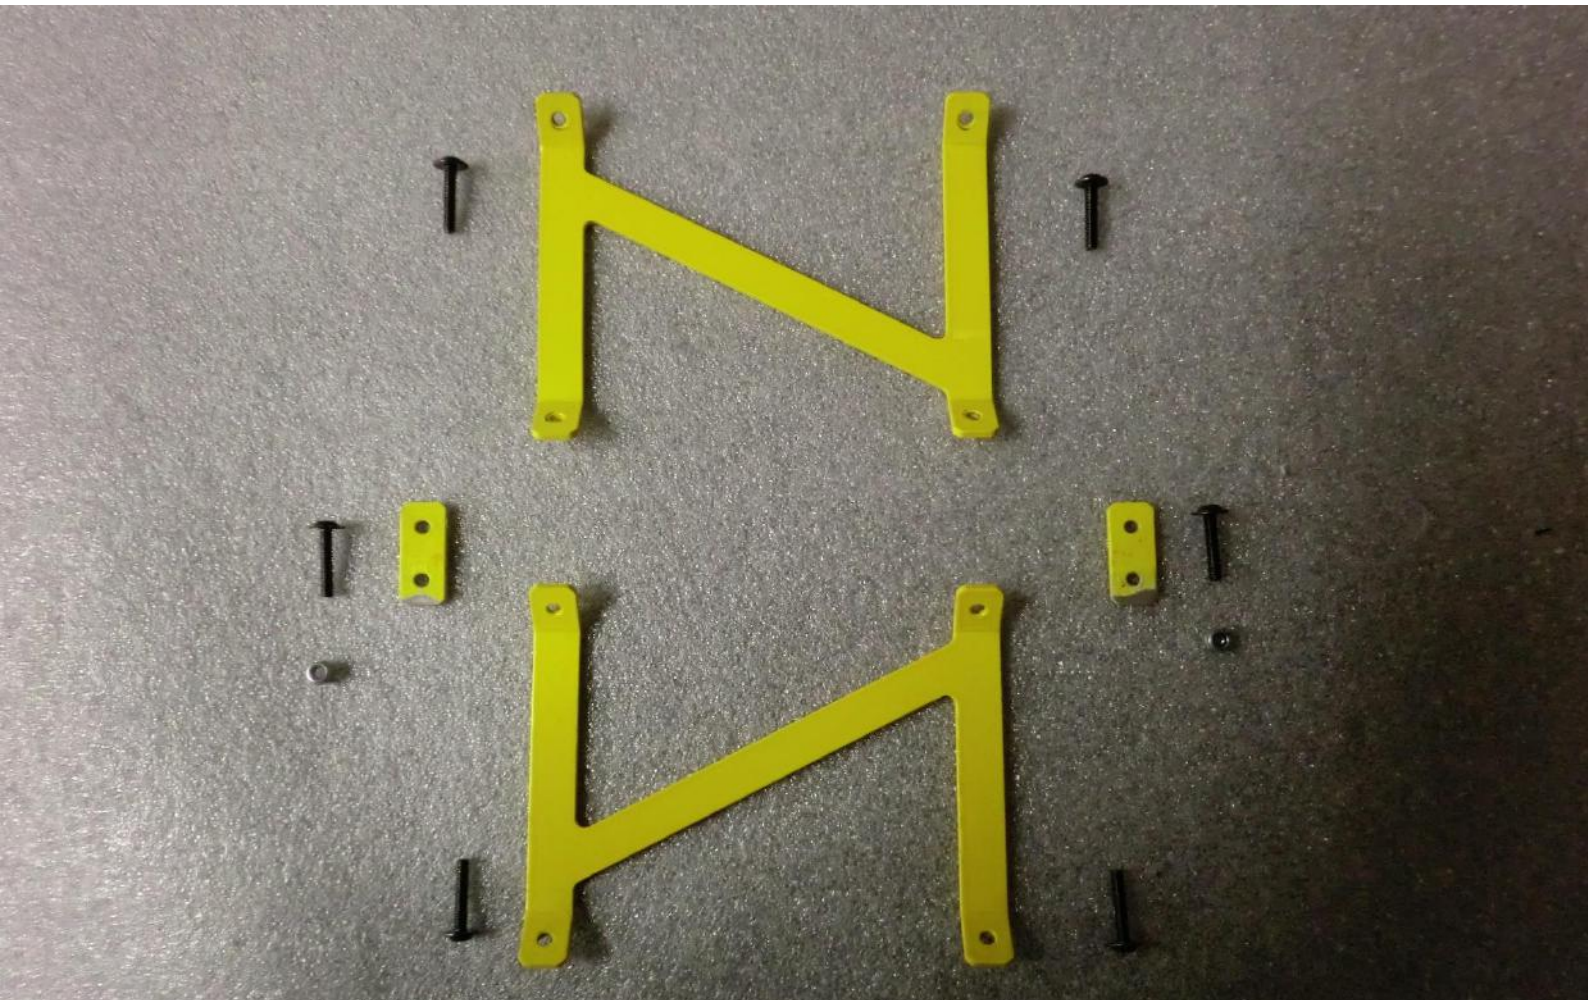

Struts installation

 step 14

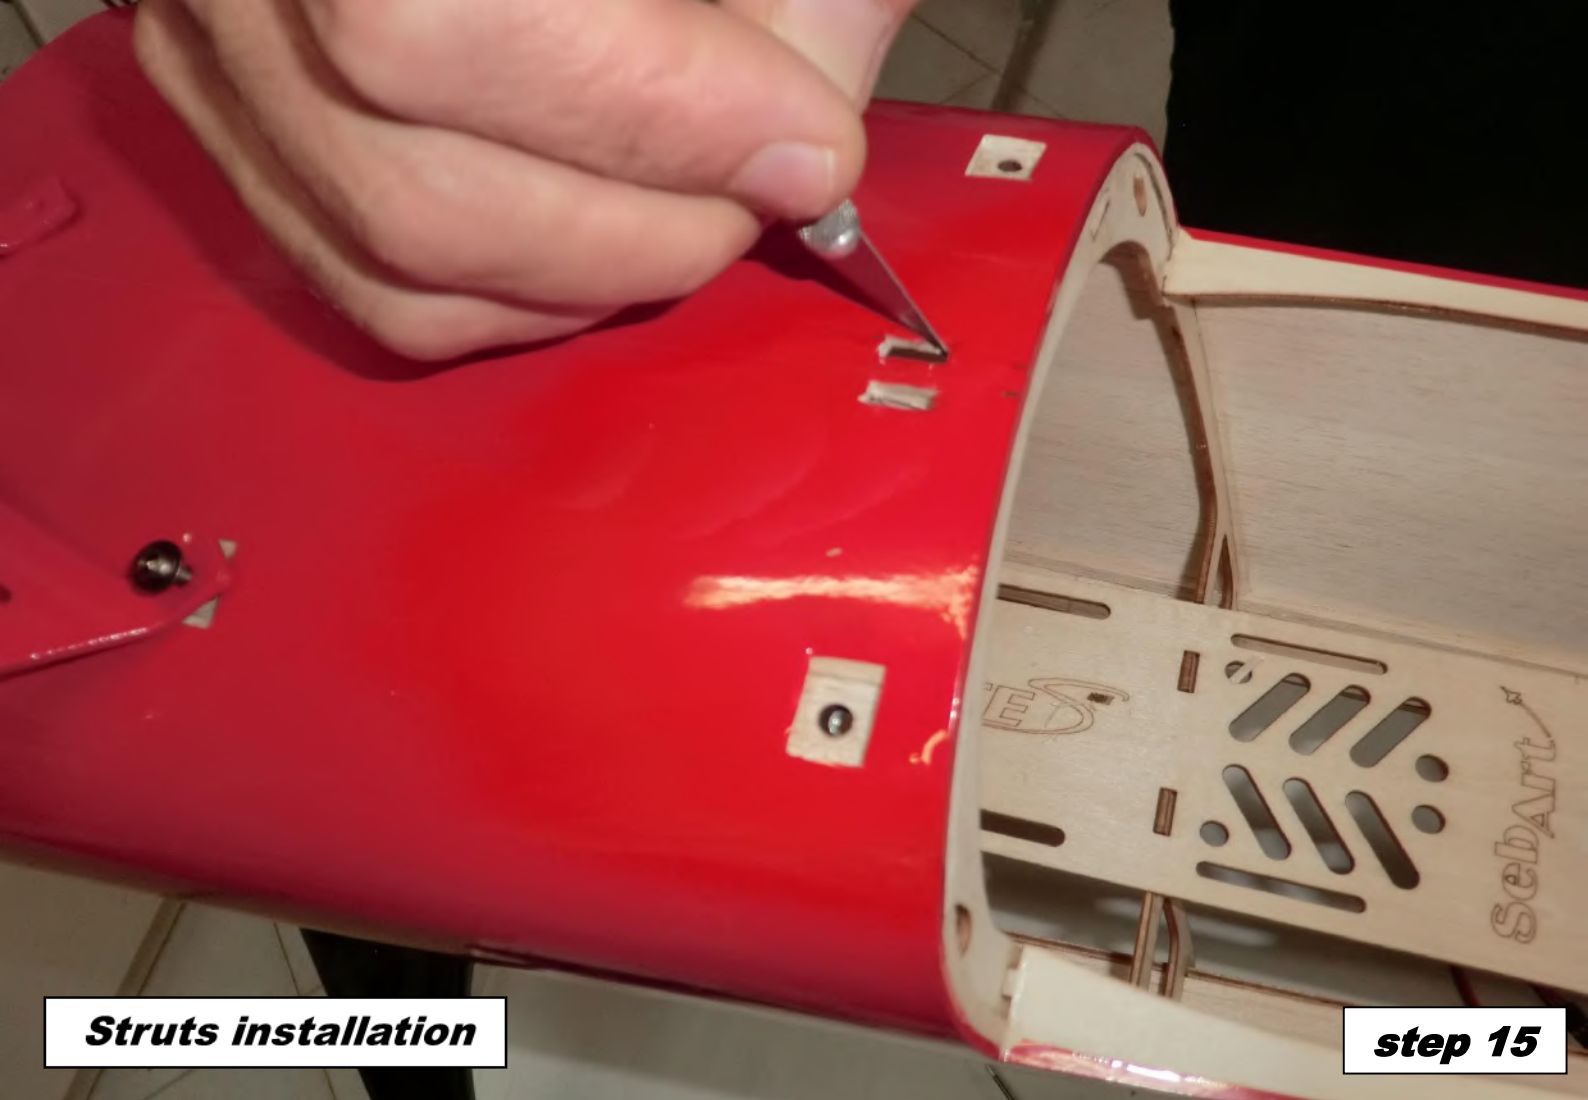

Struts installation

step 15



 
Struts installation

step 16



Struts installation


step 17

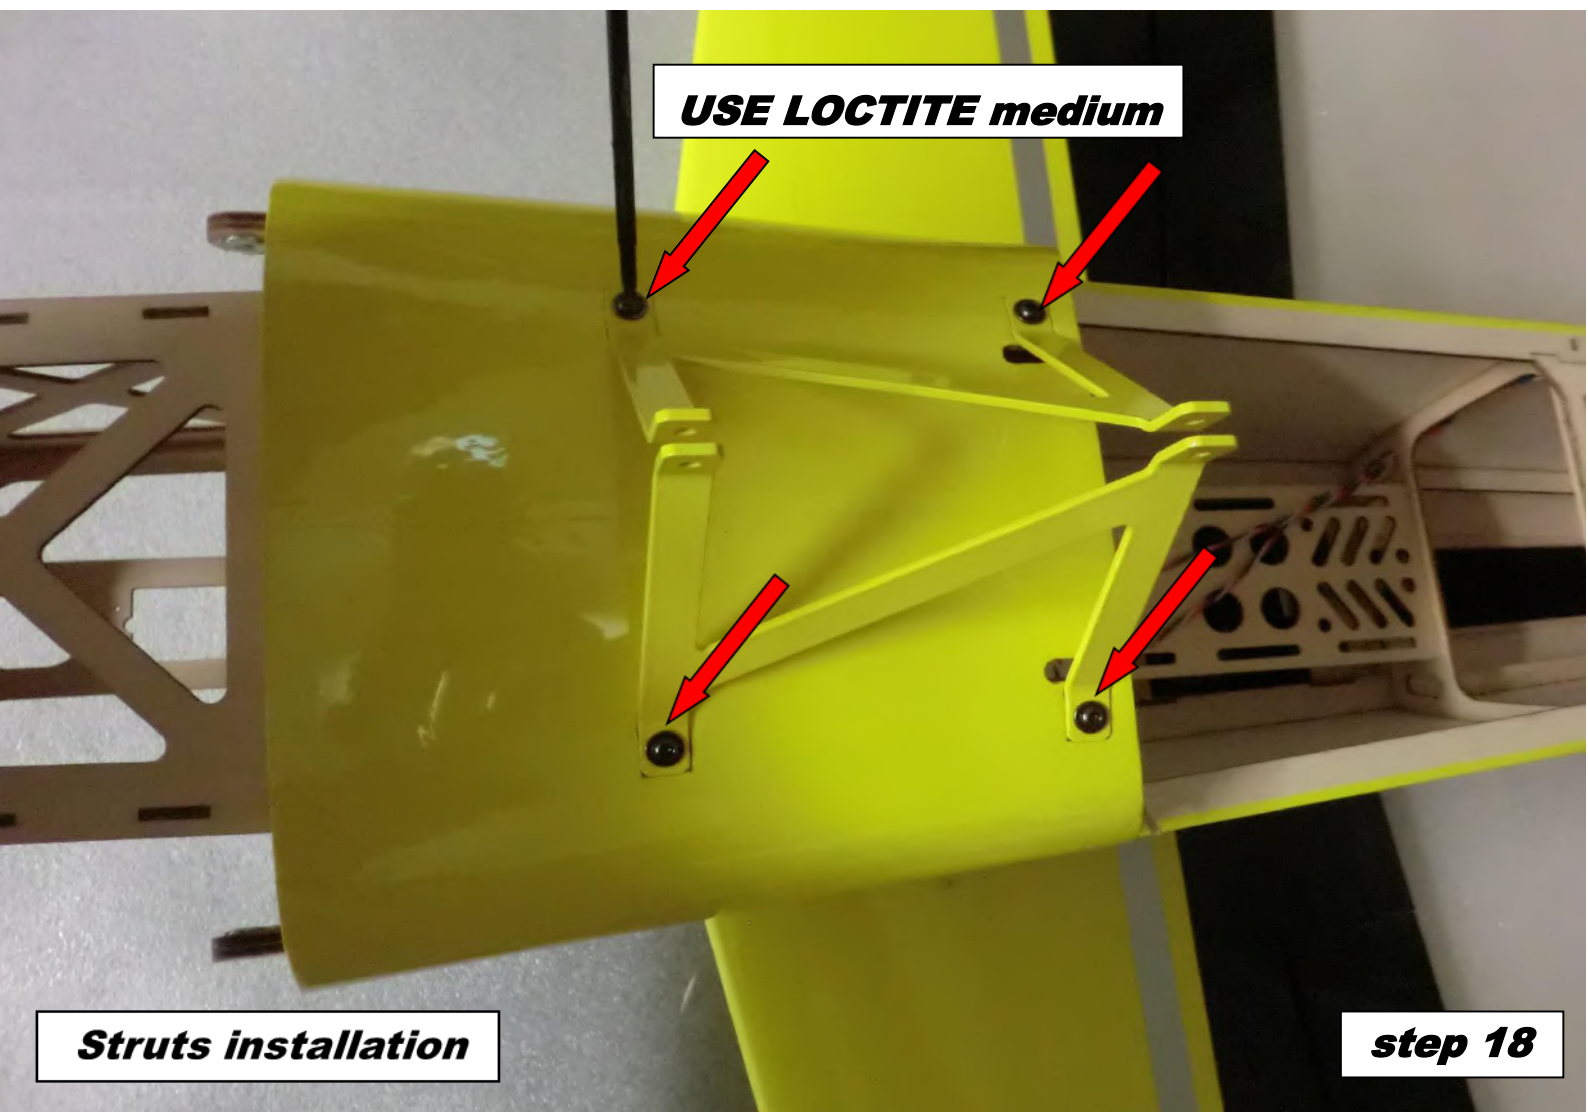

USE LOCTITE medium


Struts installation

 step 18

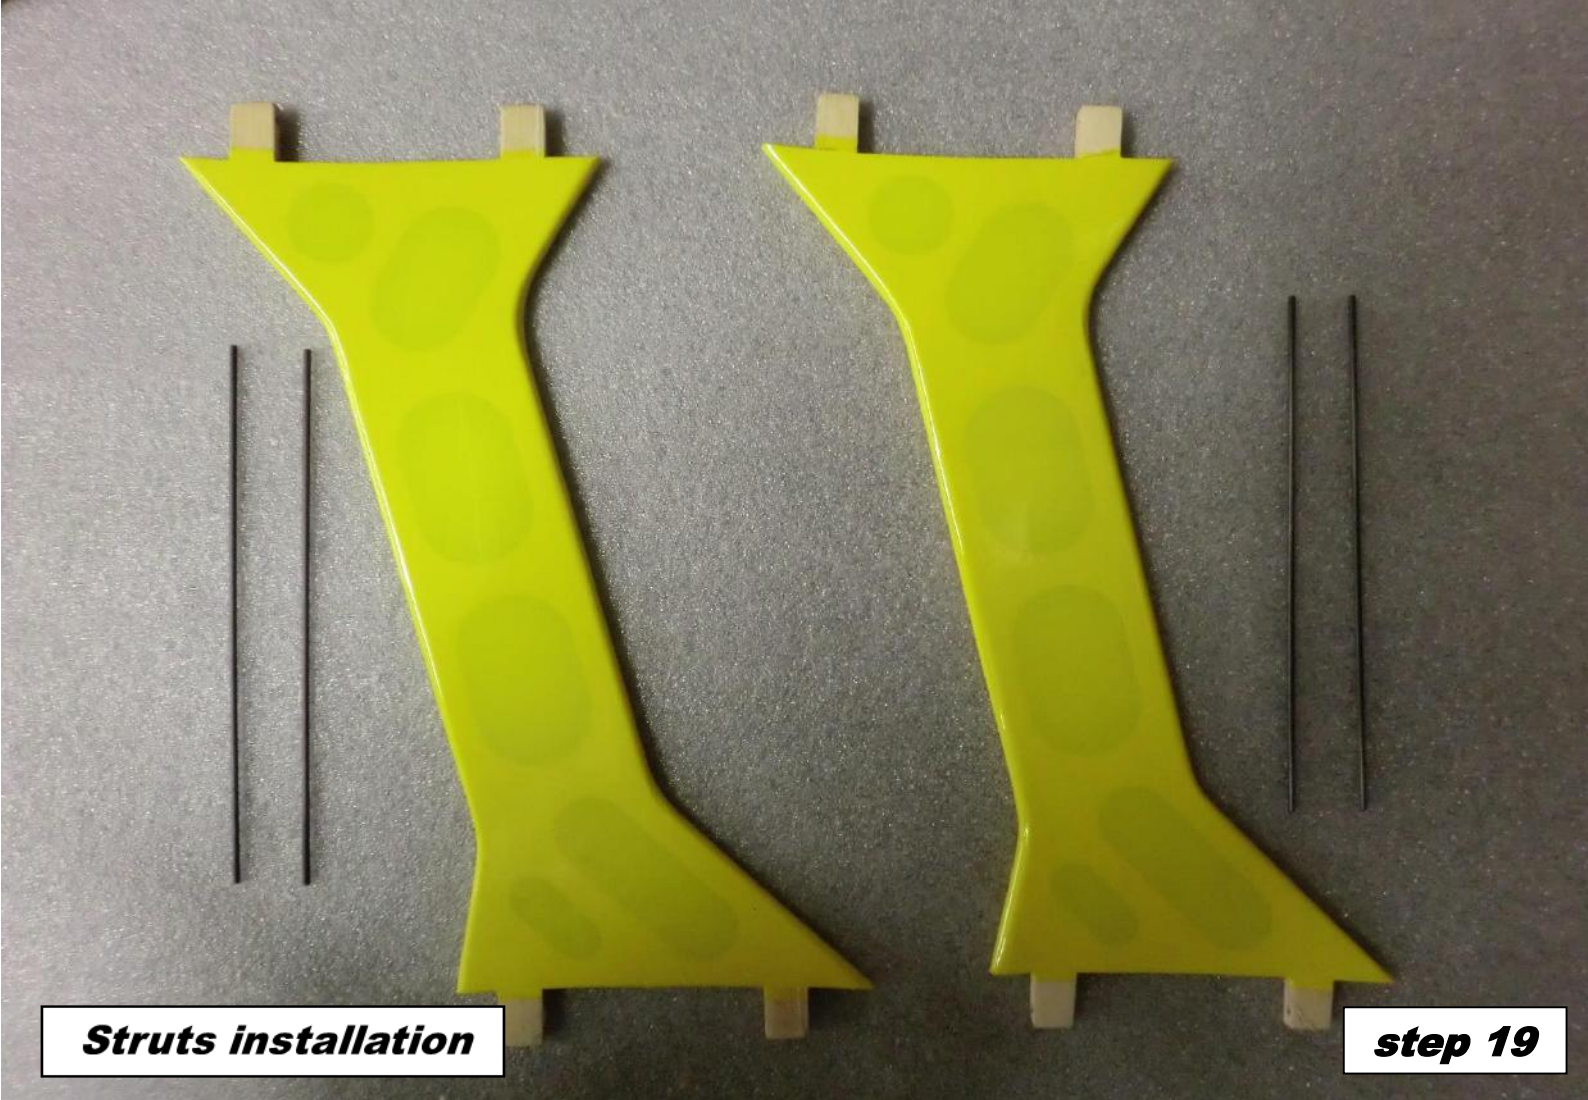

Struts installation

 step 19

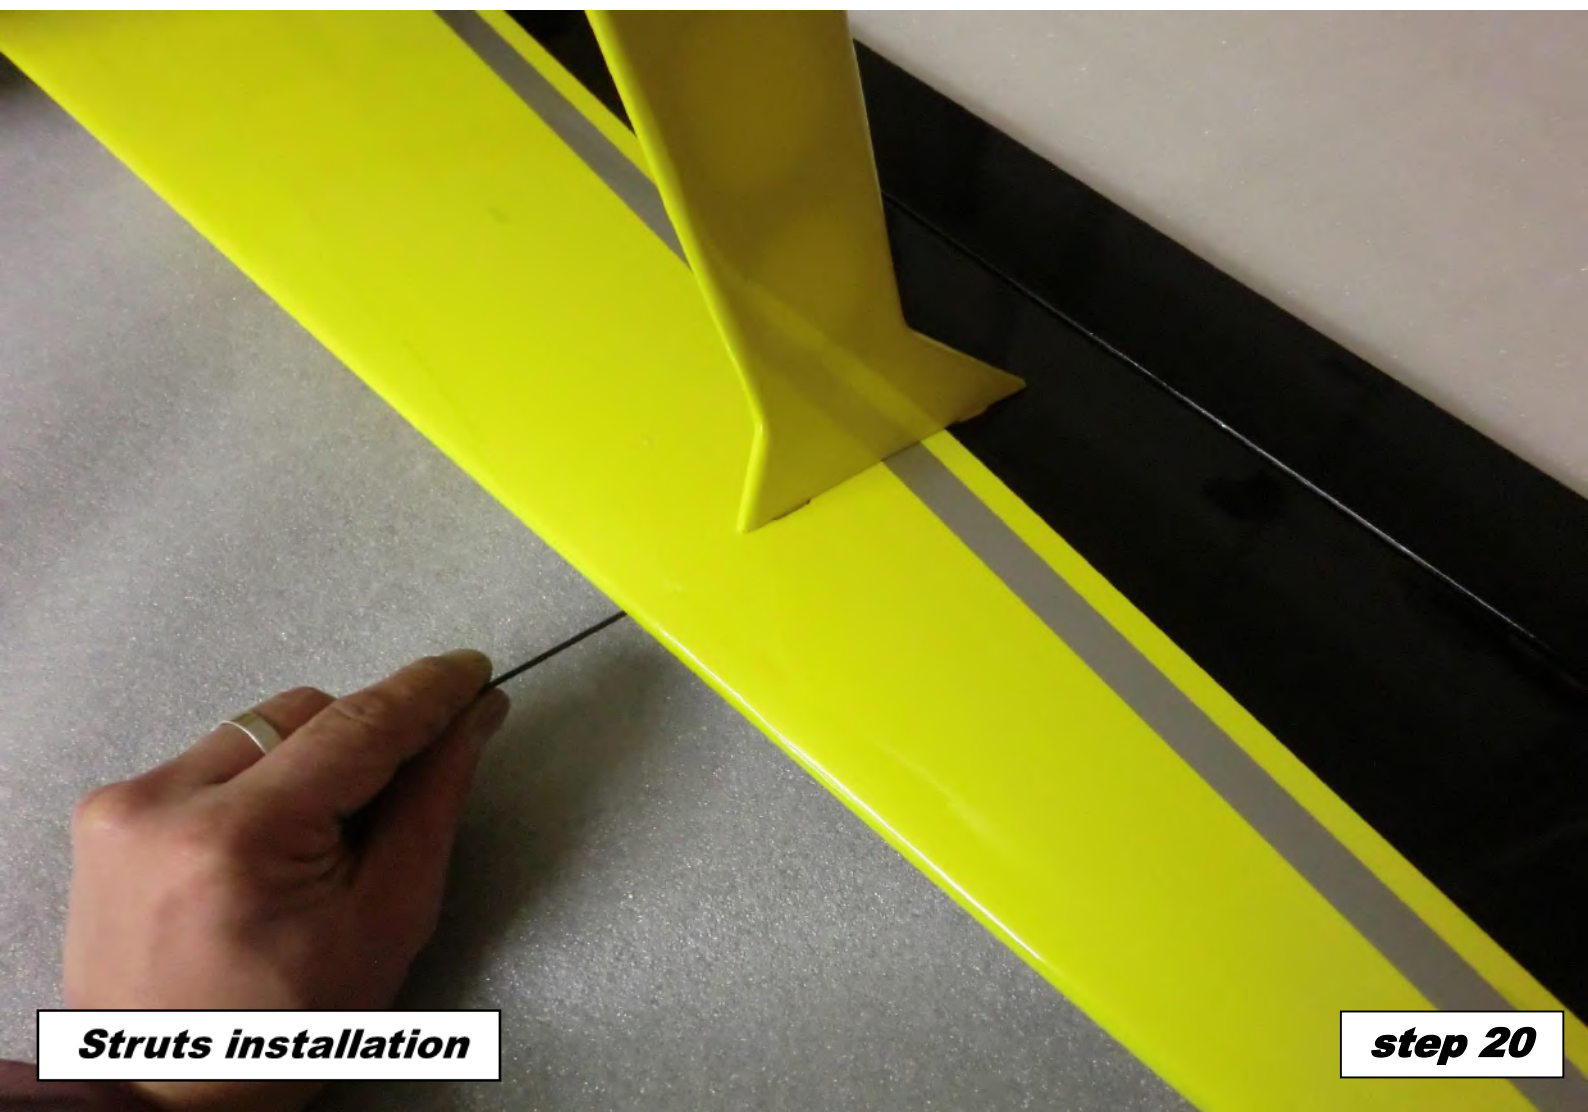

Struts installation

step 20



Struts installation

step 21



TOP WING

DO NOT GLUE NOW, ONLY LOCATE IN PLACE

Struts installation

step 22

 
INSTALL TOP WING



Struts installation

step 23

MARK ONLY

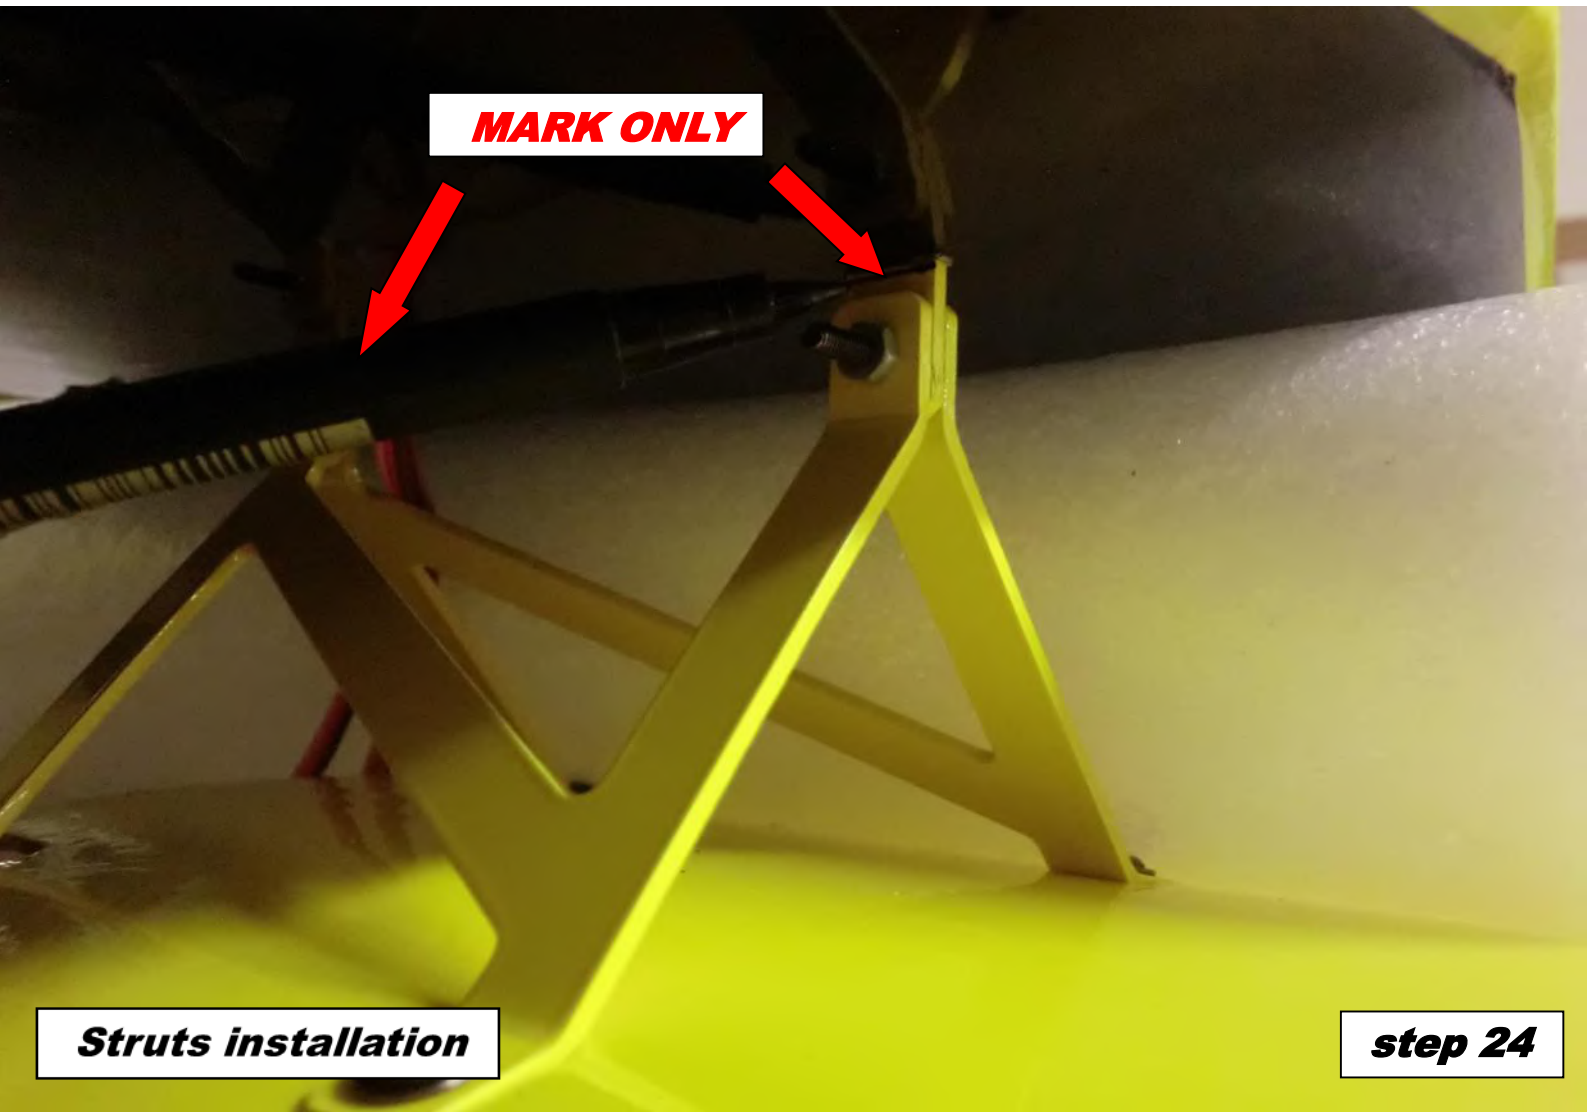

Struts installation

step 24

 
REMOVE TOP WING



Struts installation


step 25

REMOVE PAINT SANDING

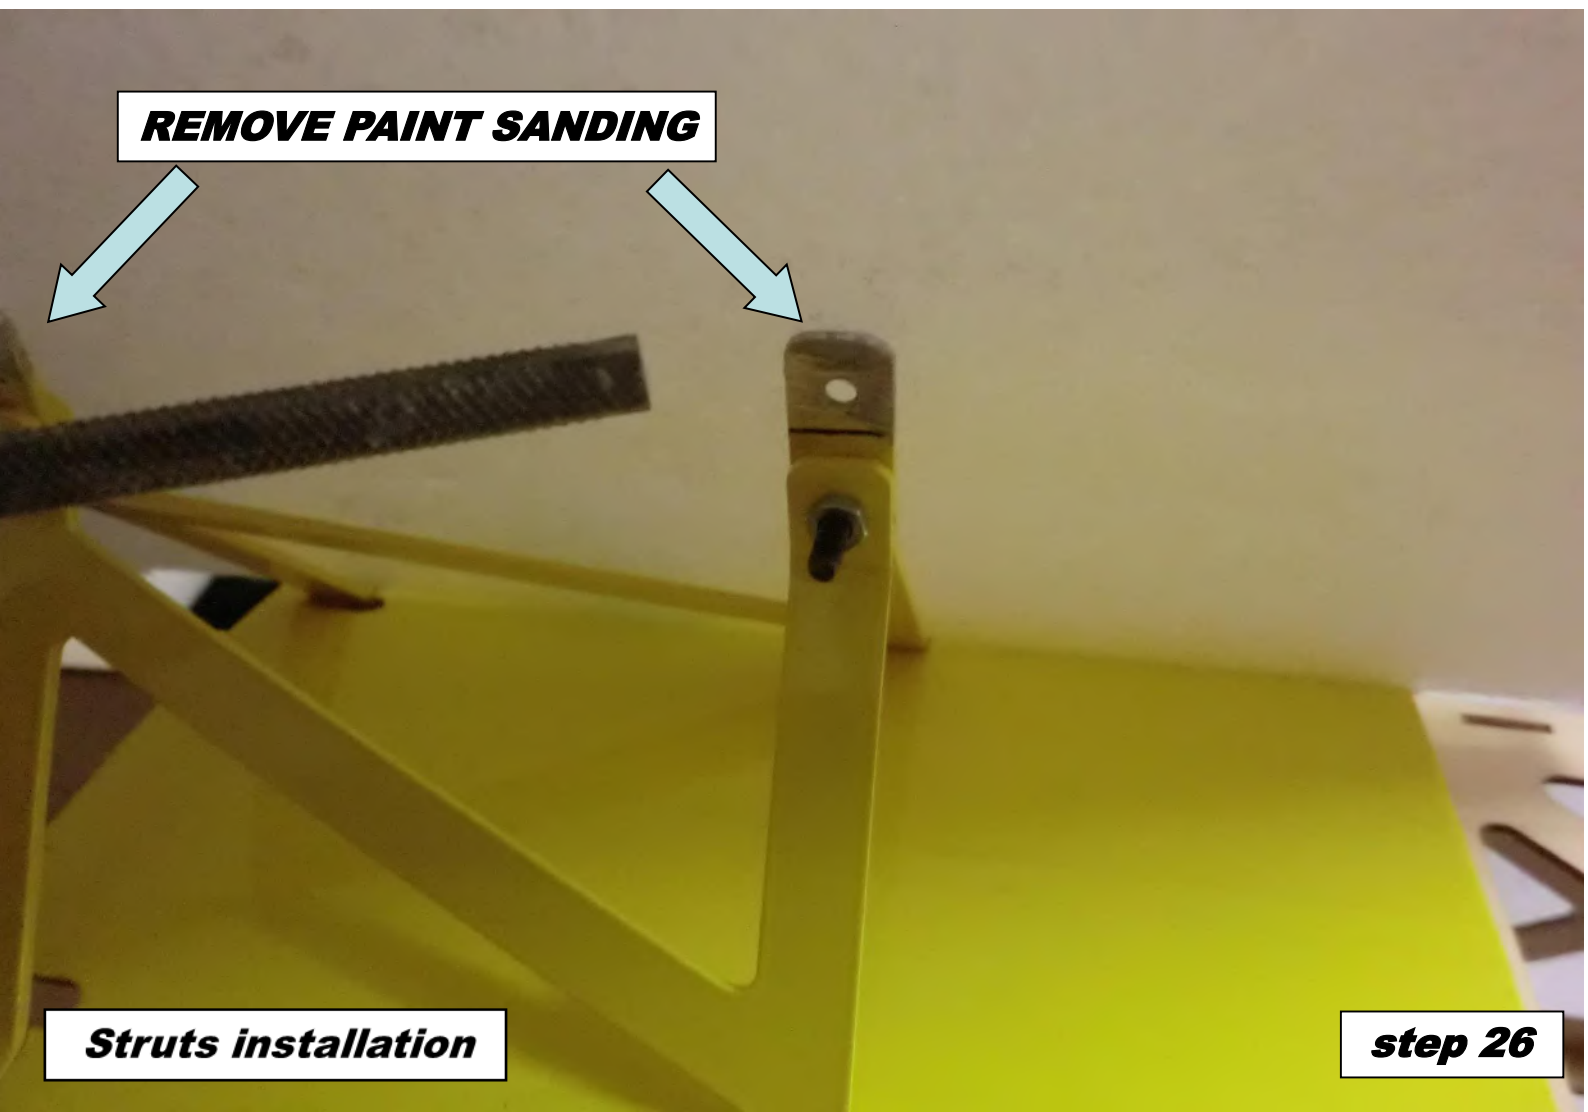

Struts installation

 step 26

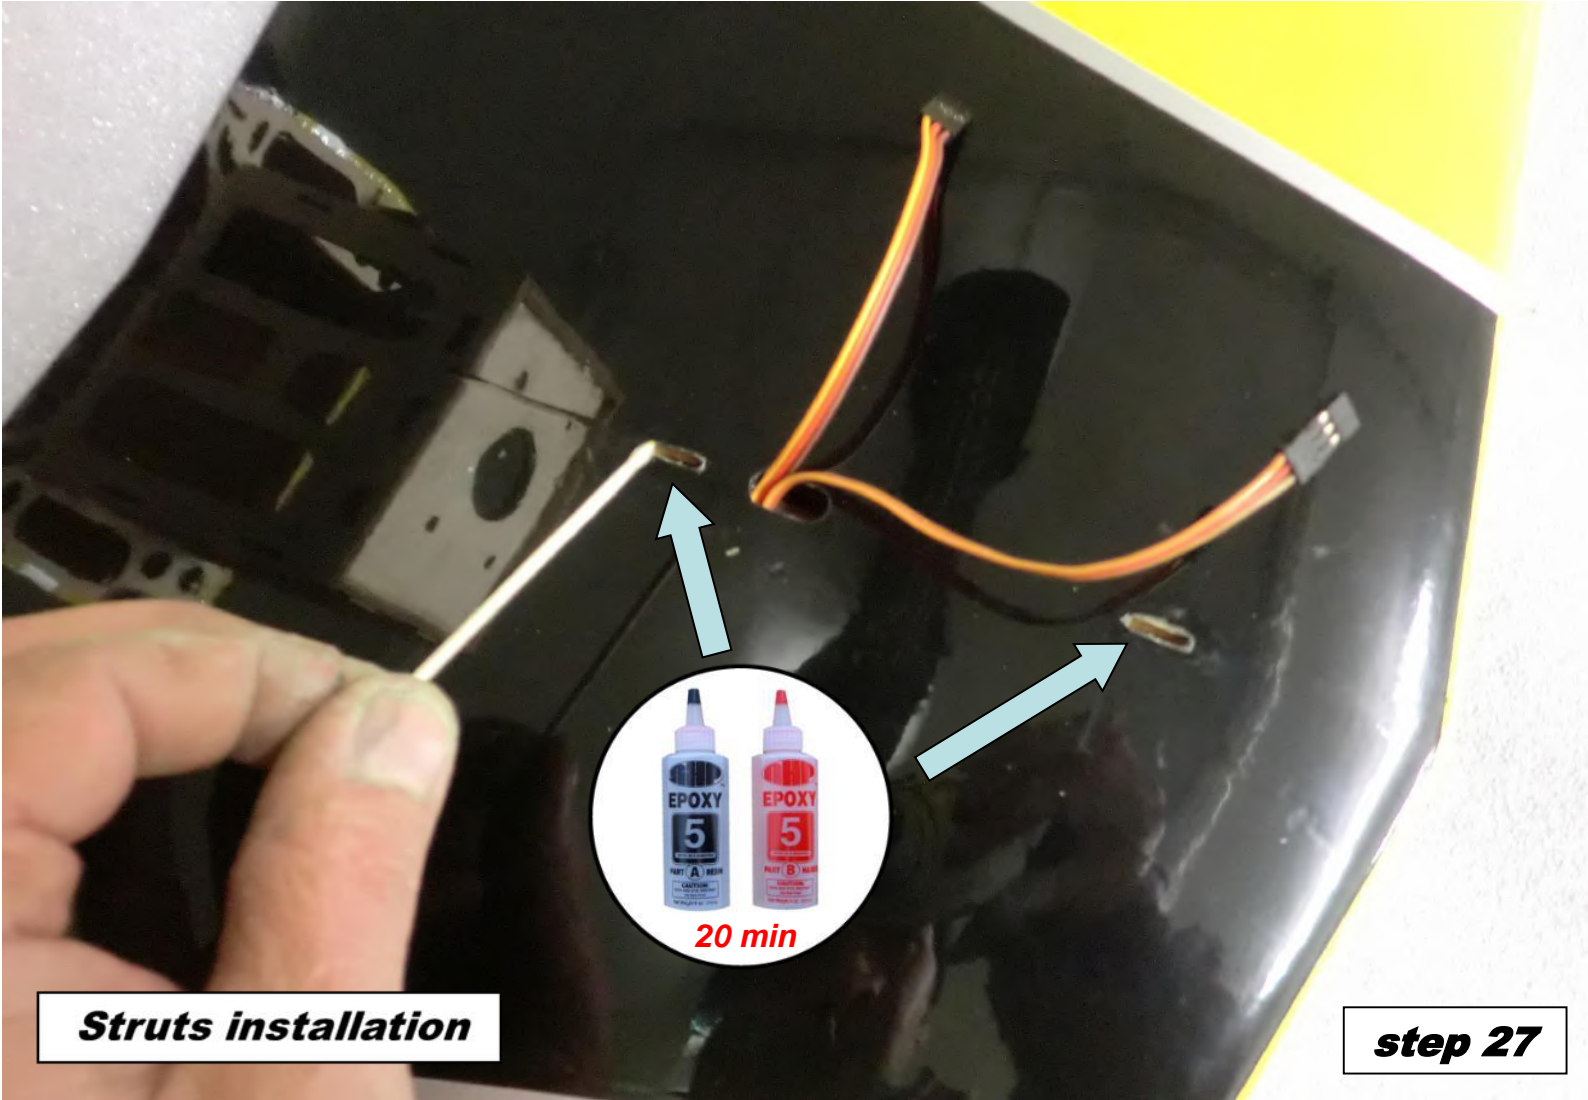

Struts installation

step 27



REINSTALL TOP WING

Struts installation

step 28



Rudder installation

step 29



 
Rudder installation

step 30



Rudder installation

step 31

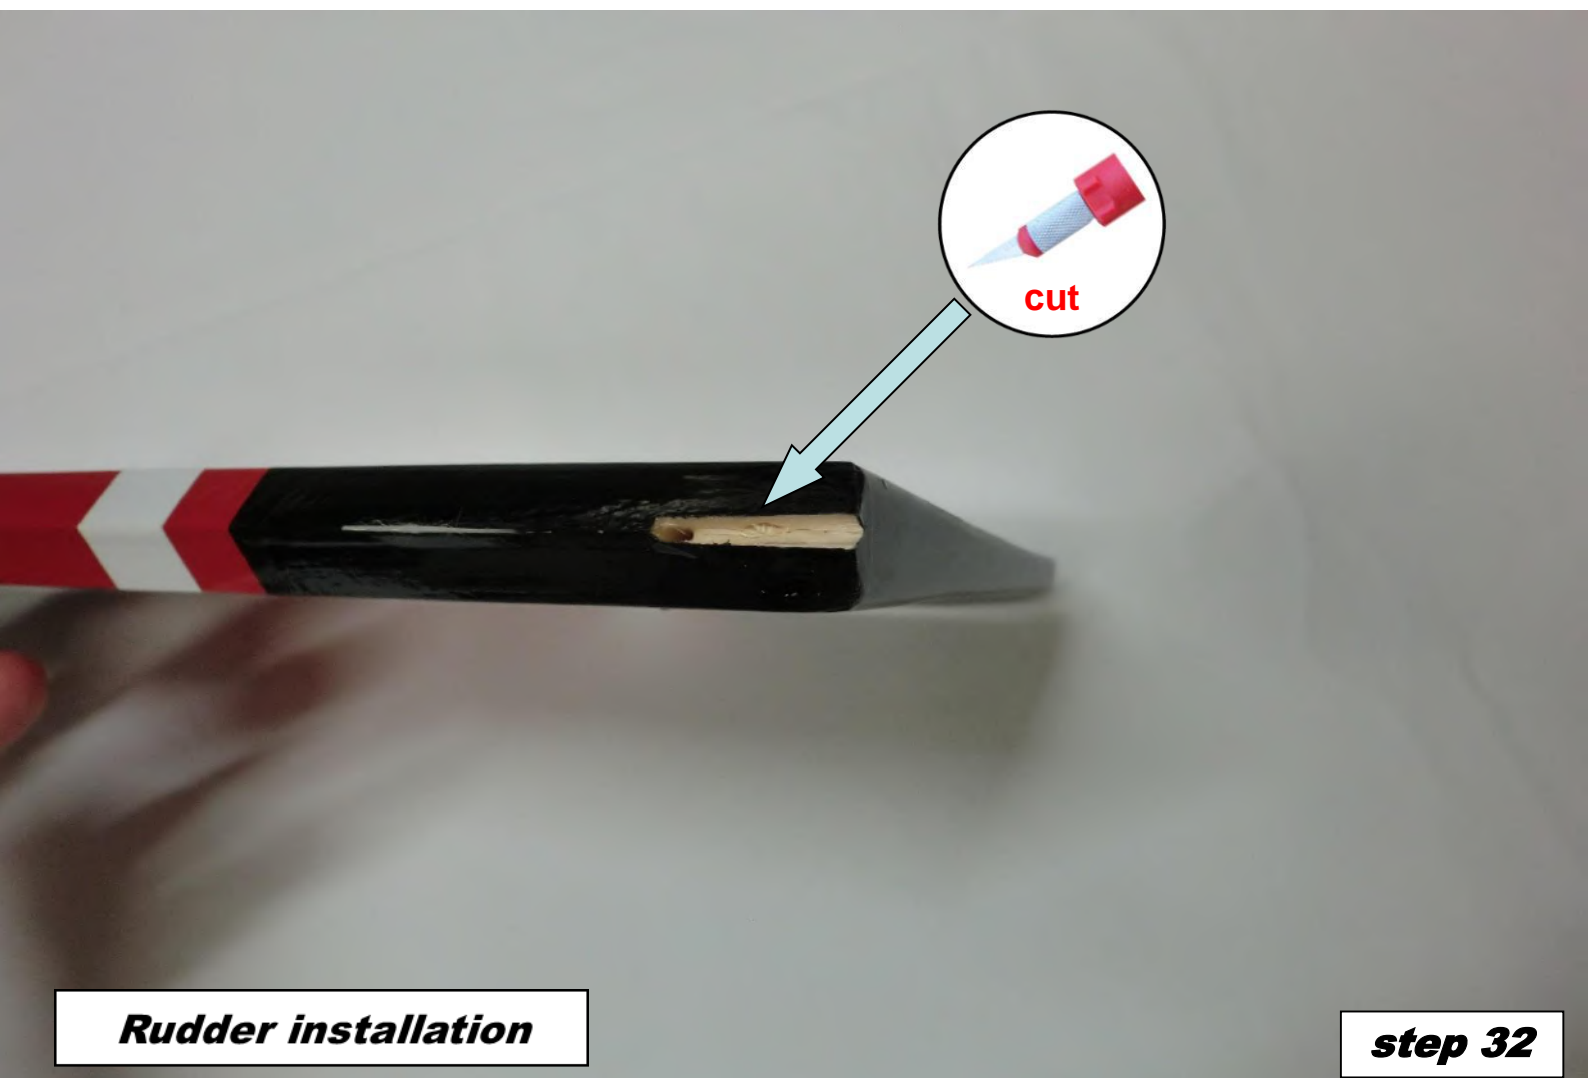


Rudder installation

step 32




Rudder installation

 step 33

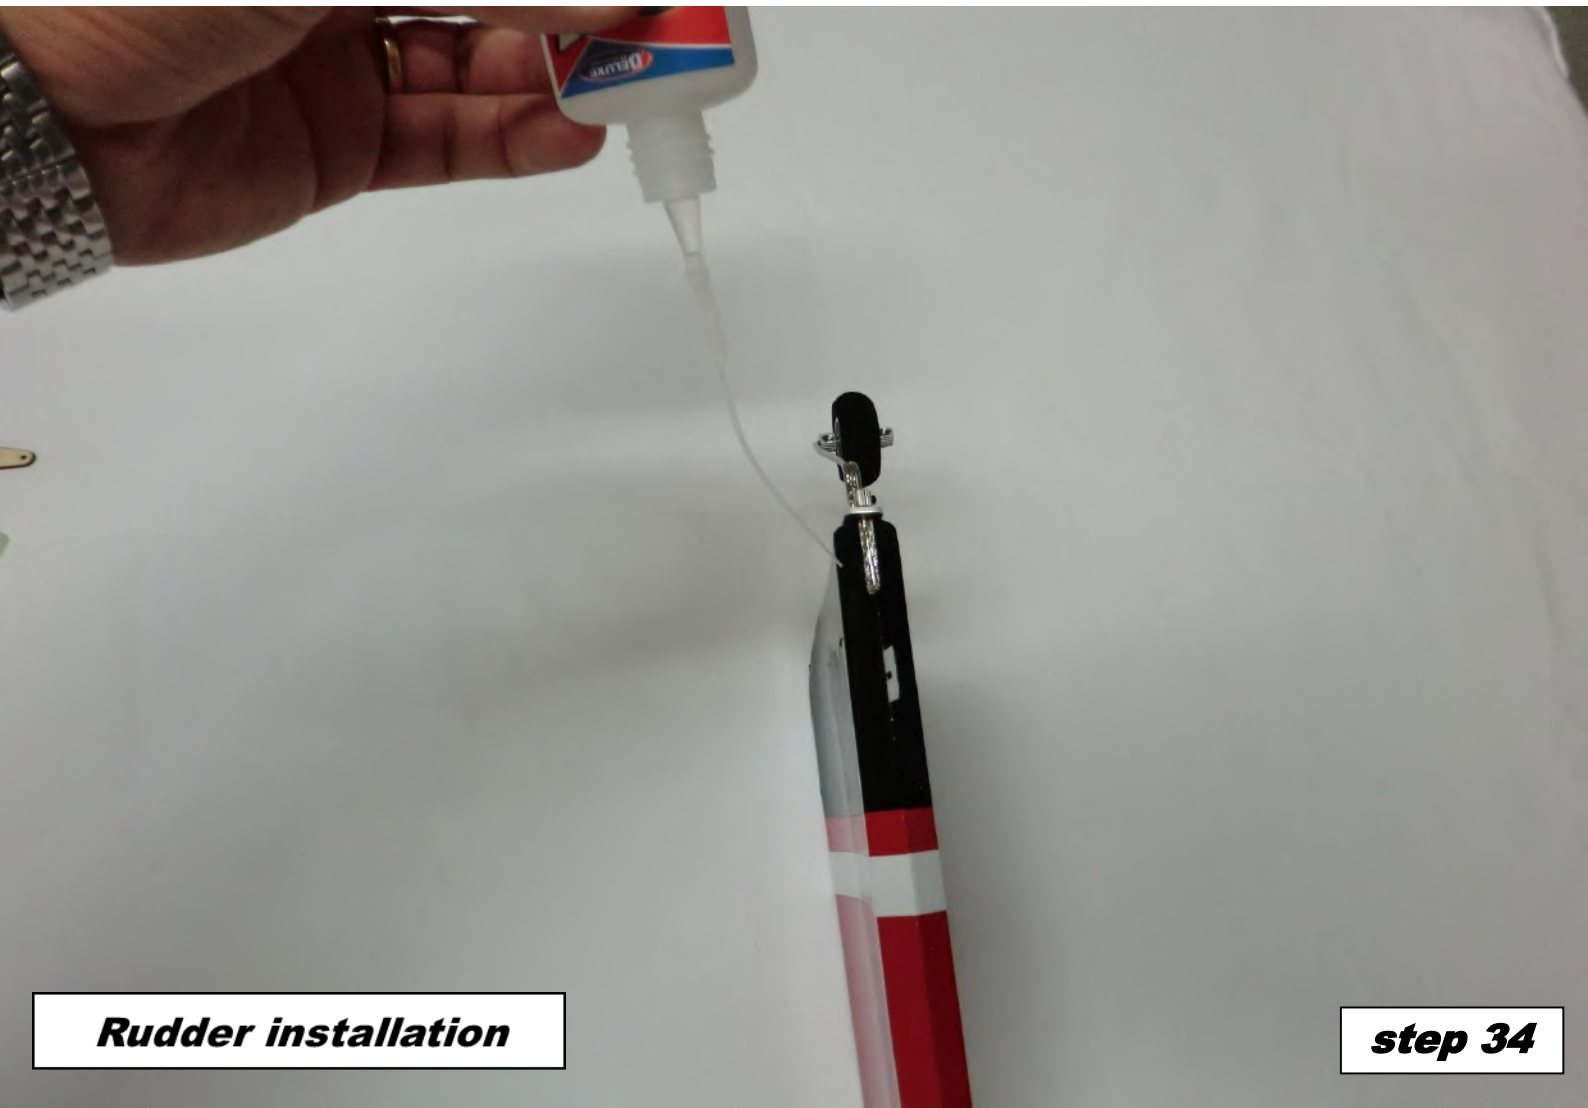

Rudder installation

 step 34

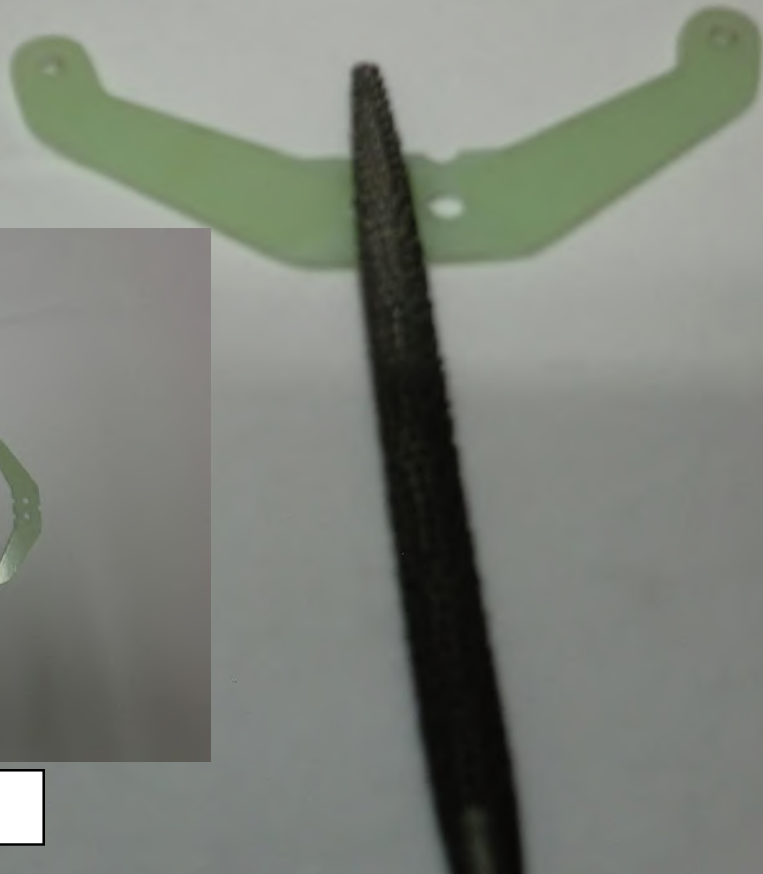

Rudder installation

step 35



 
Rudder installation

step 36



Rudder installation

step 37

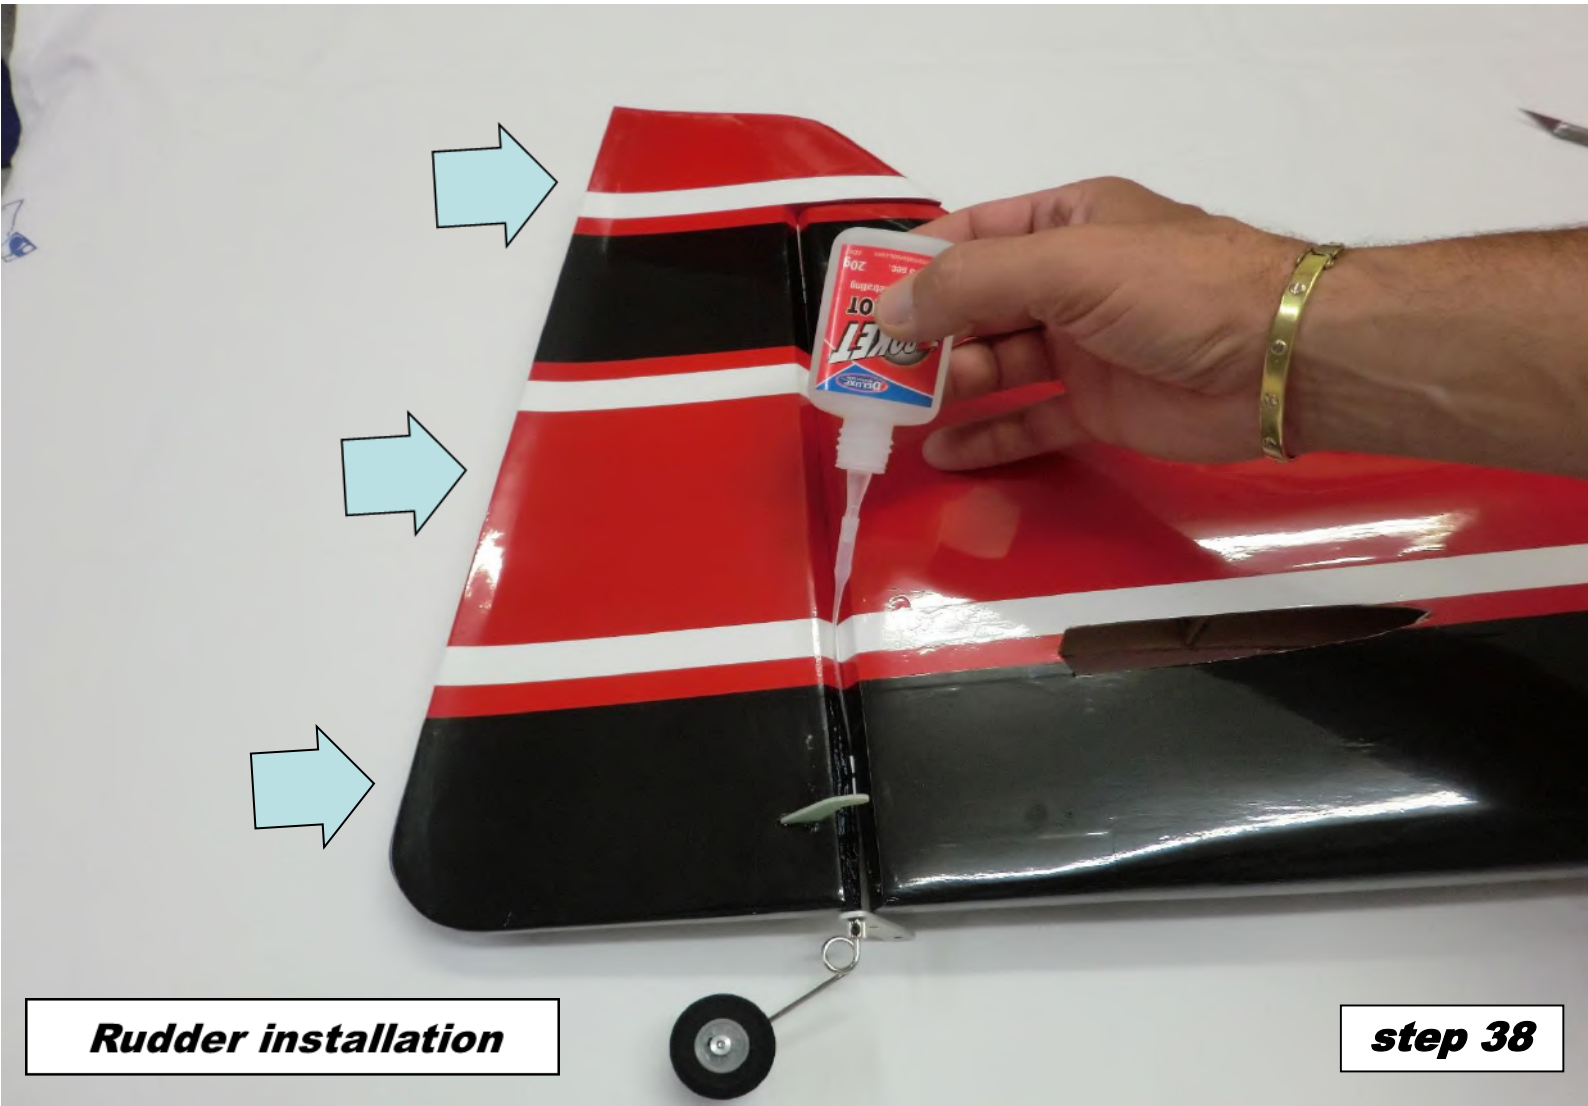

Rudder installation

step 38



Rudder installation

step 39



 
Rudder installation

step 40




Rudder installation

step 42

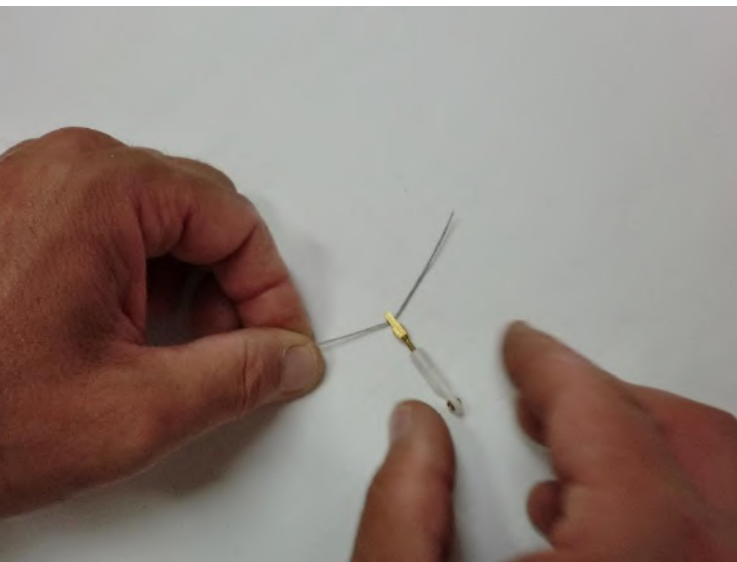

Rudder installation

 step 43

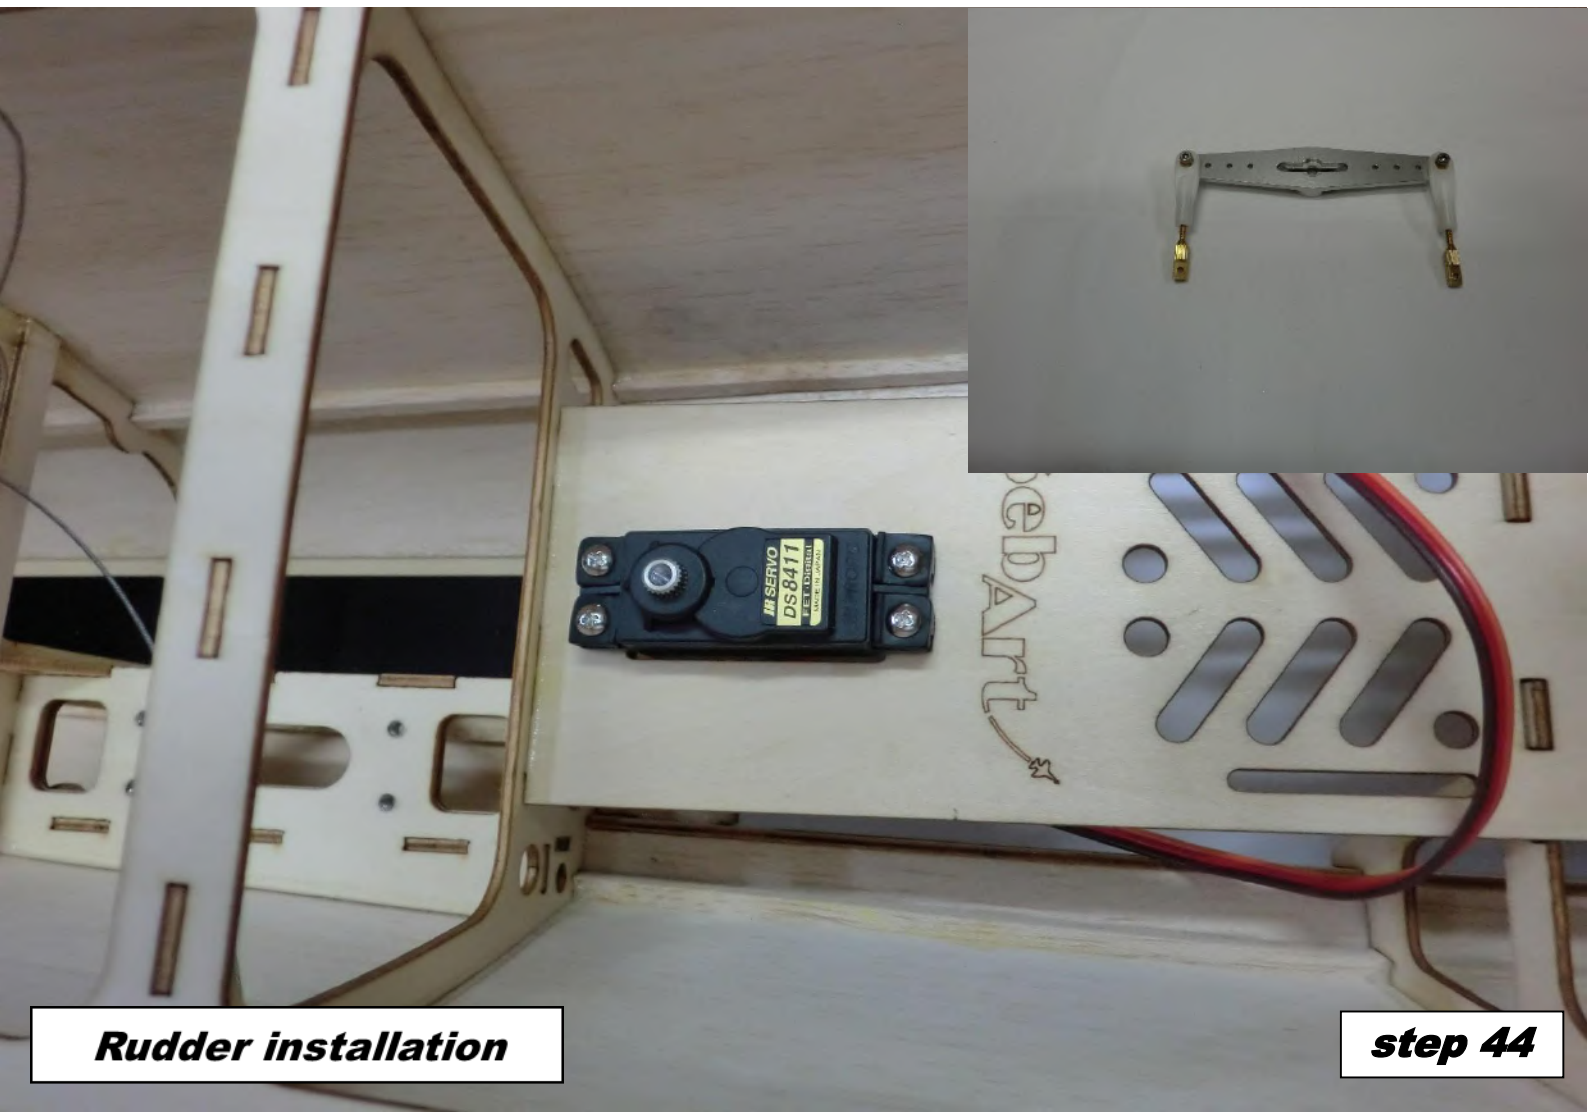



Rudder installation

step 45



Rudder installation

step 46



 
Elevator installation

 
 
step 47



Elevator installation

step 48

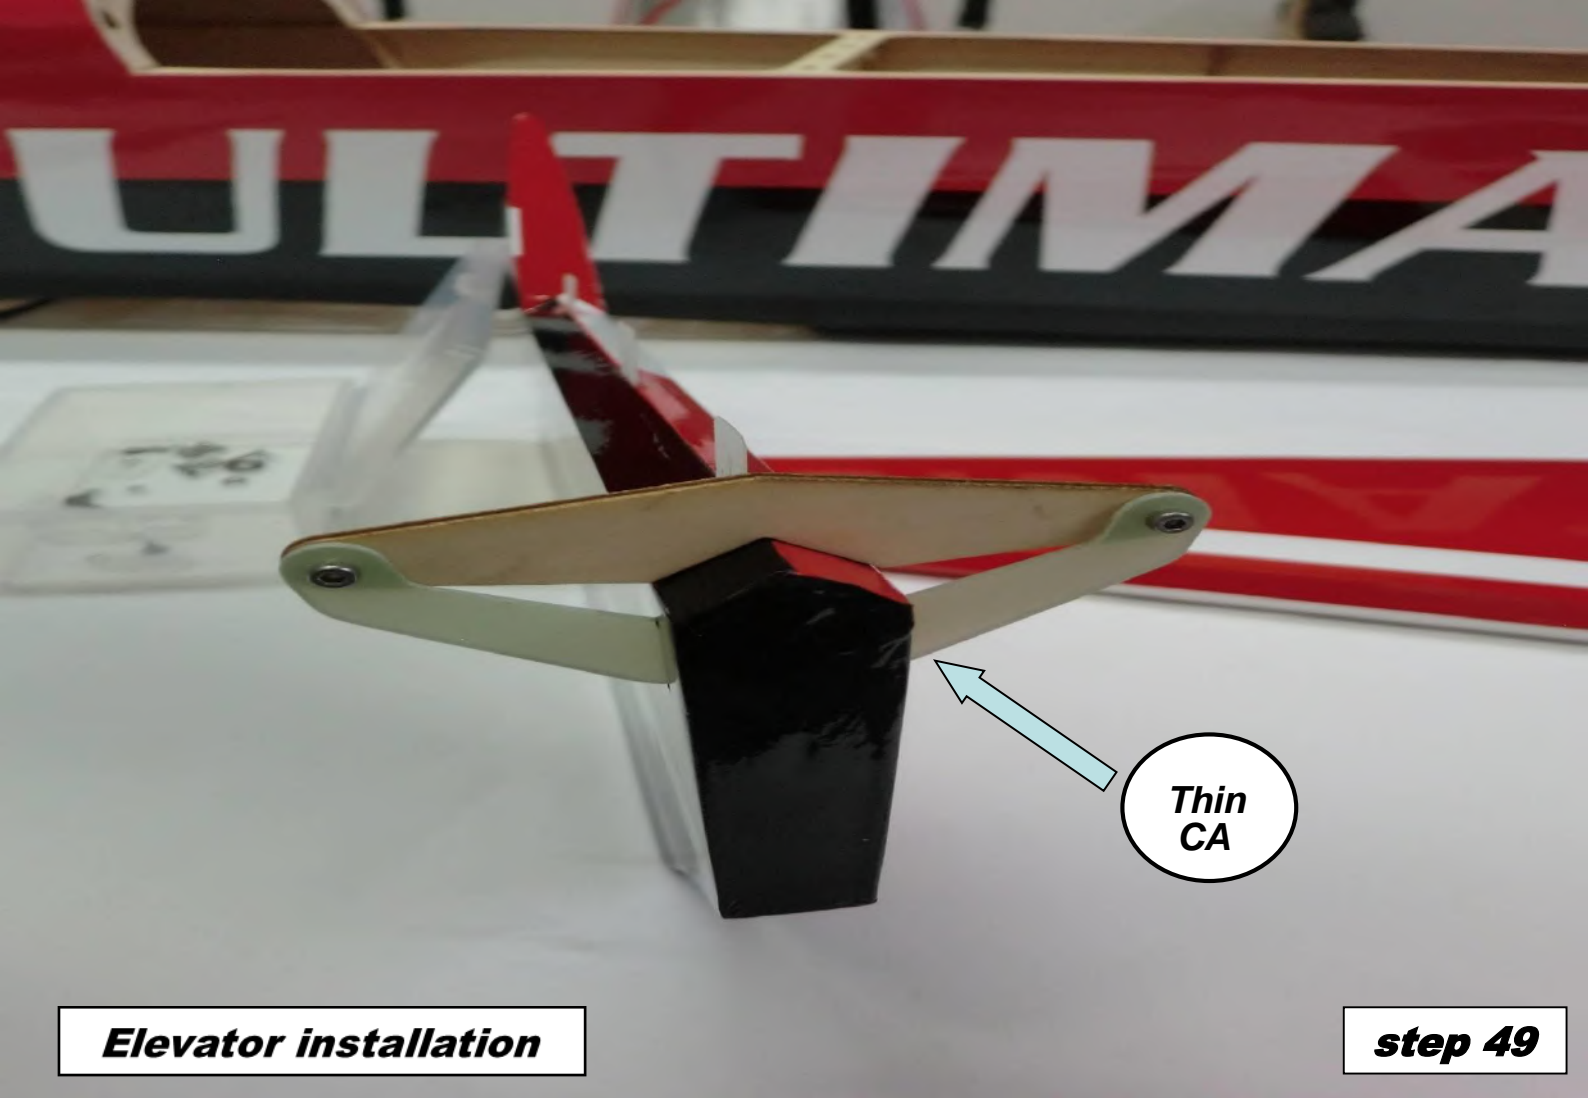

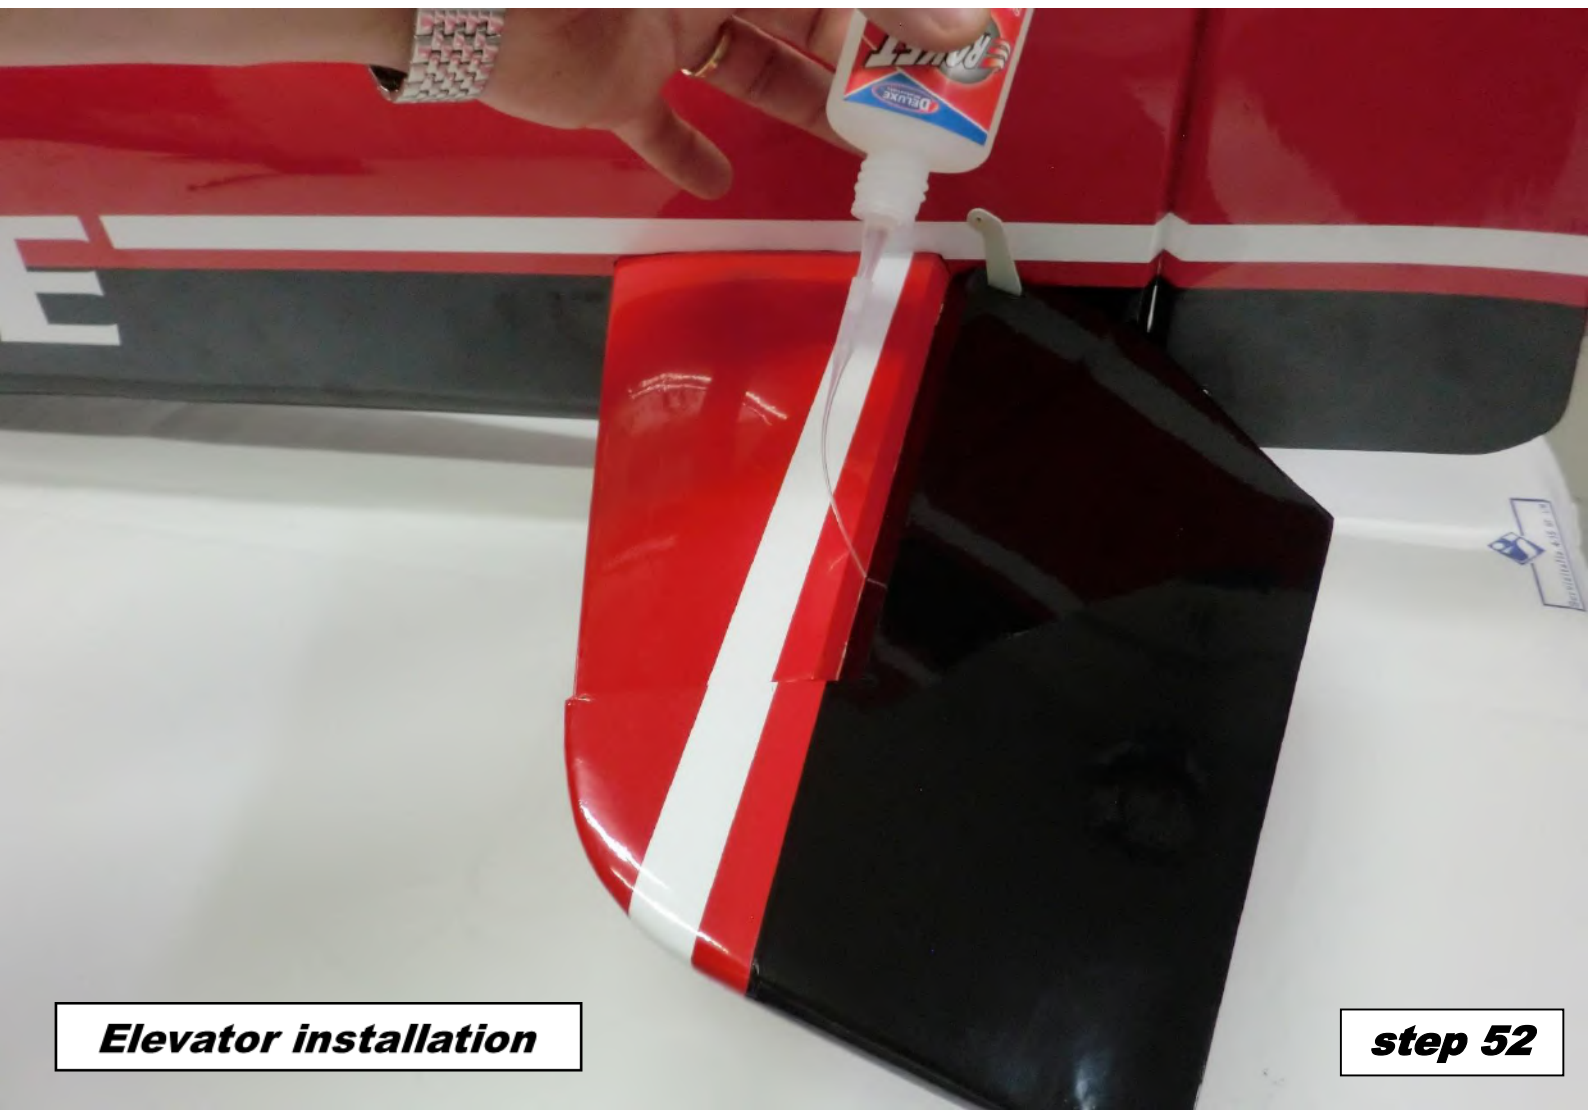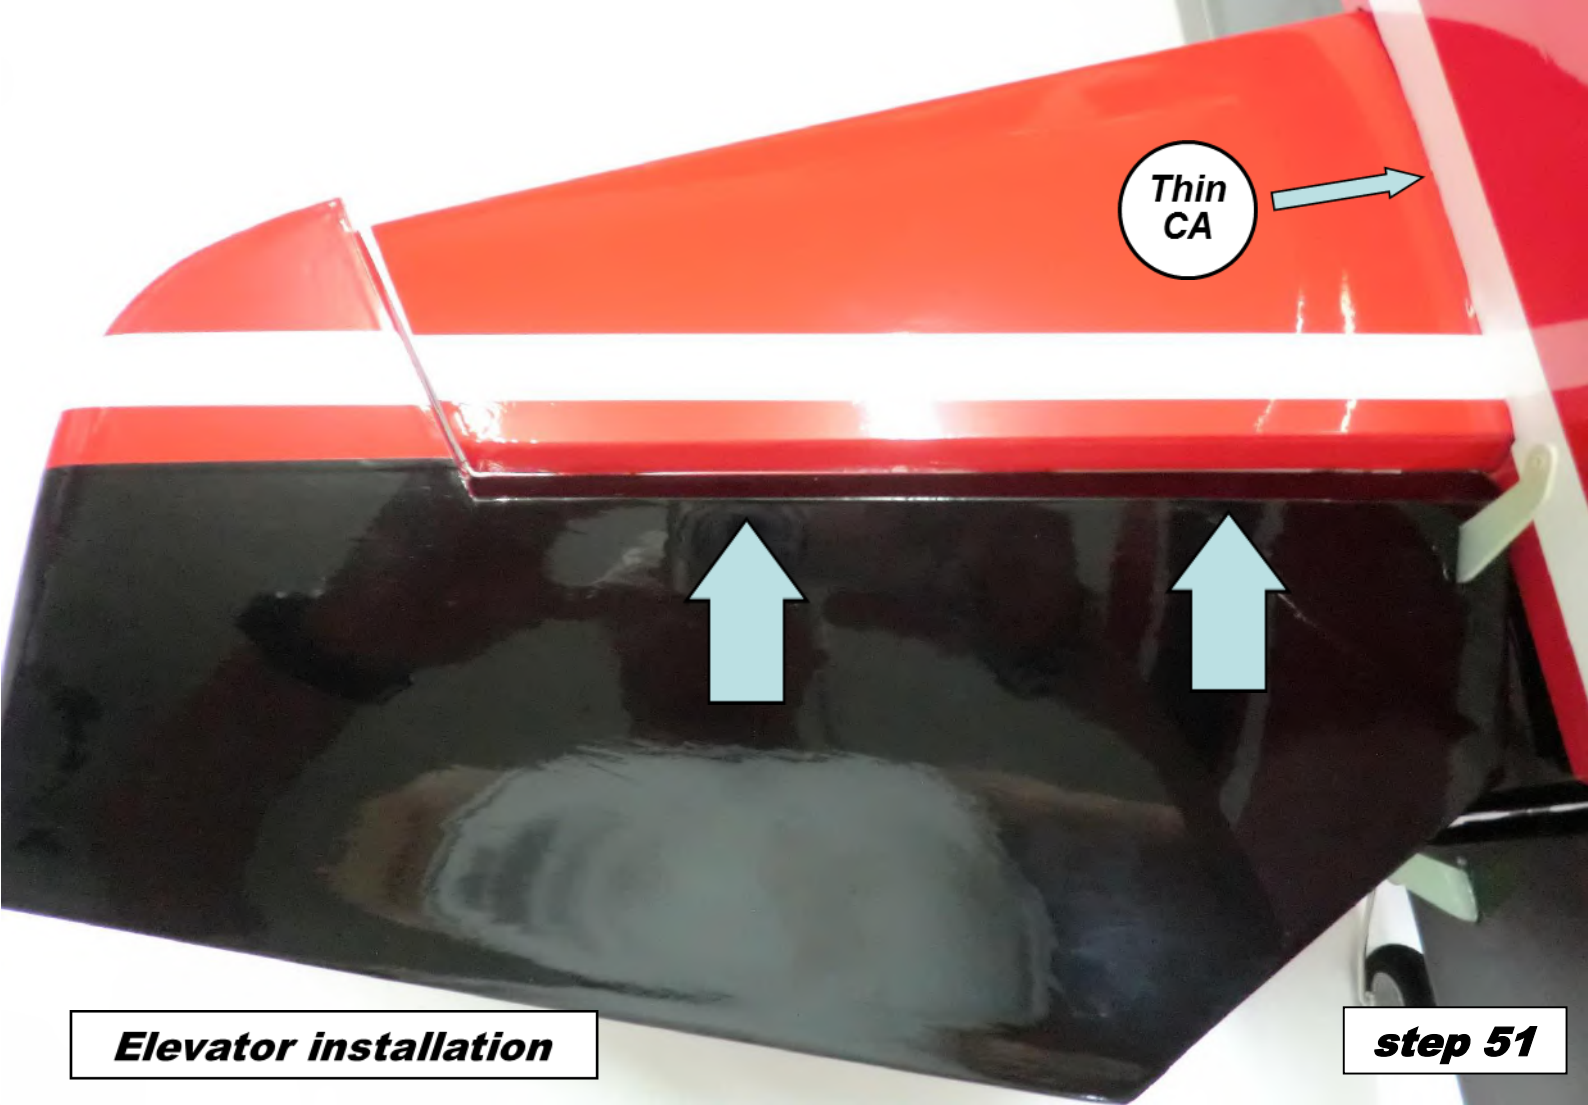



Elevator installation

step 53



Elevator installation

step 54



Elevator installation

step 55



Elevator installation

step 56



 
Elevator installation

step 57




Elevator installation

step 58

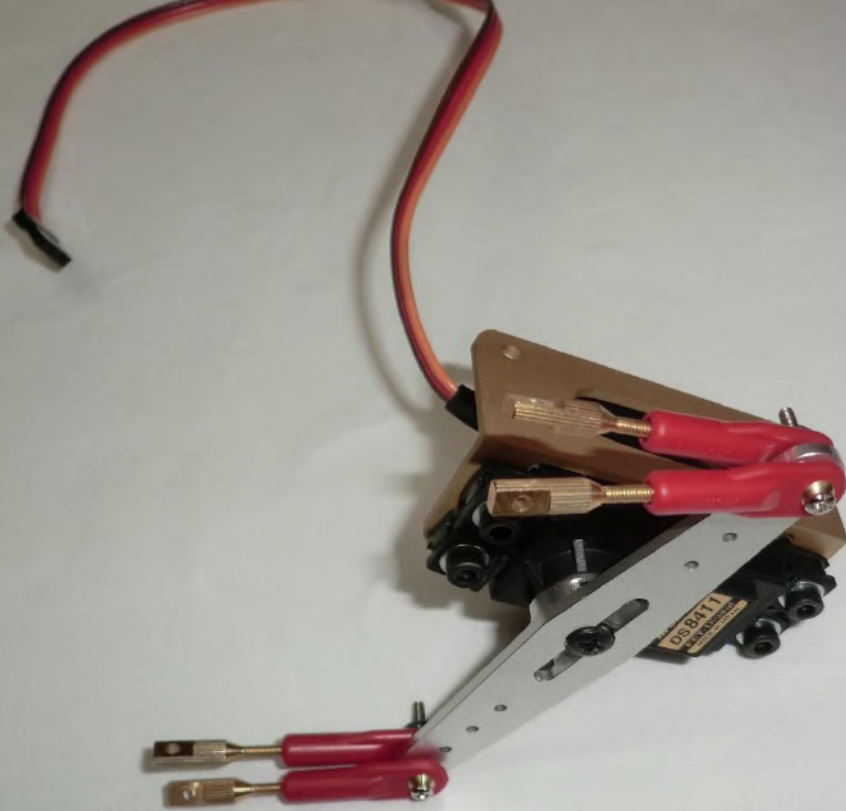


Elevator installation

 step 59

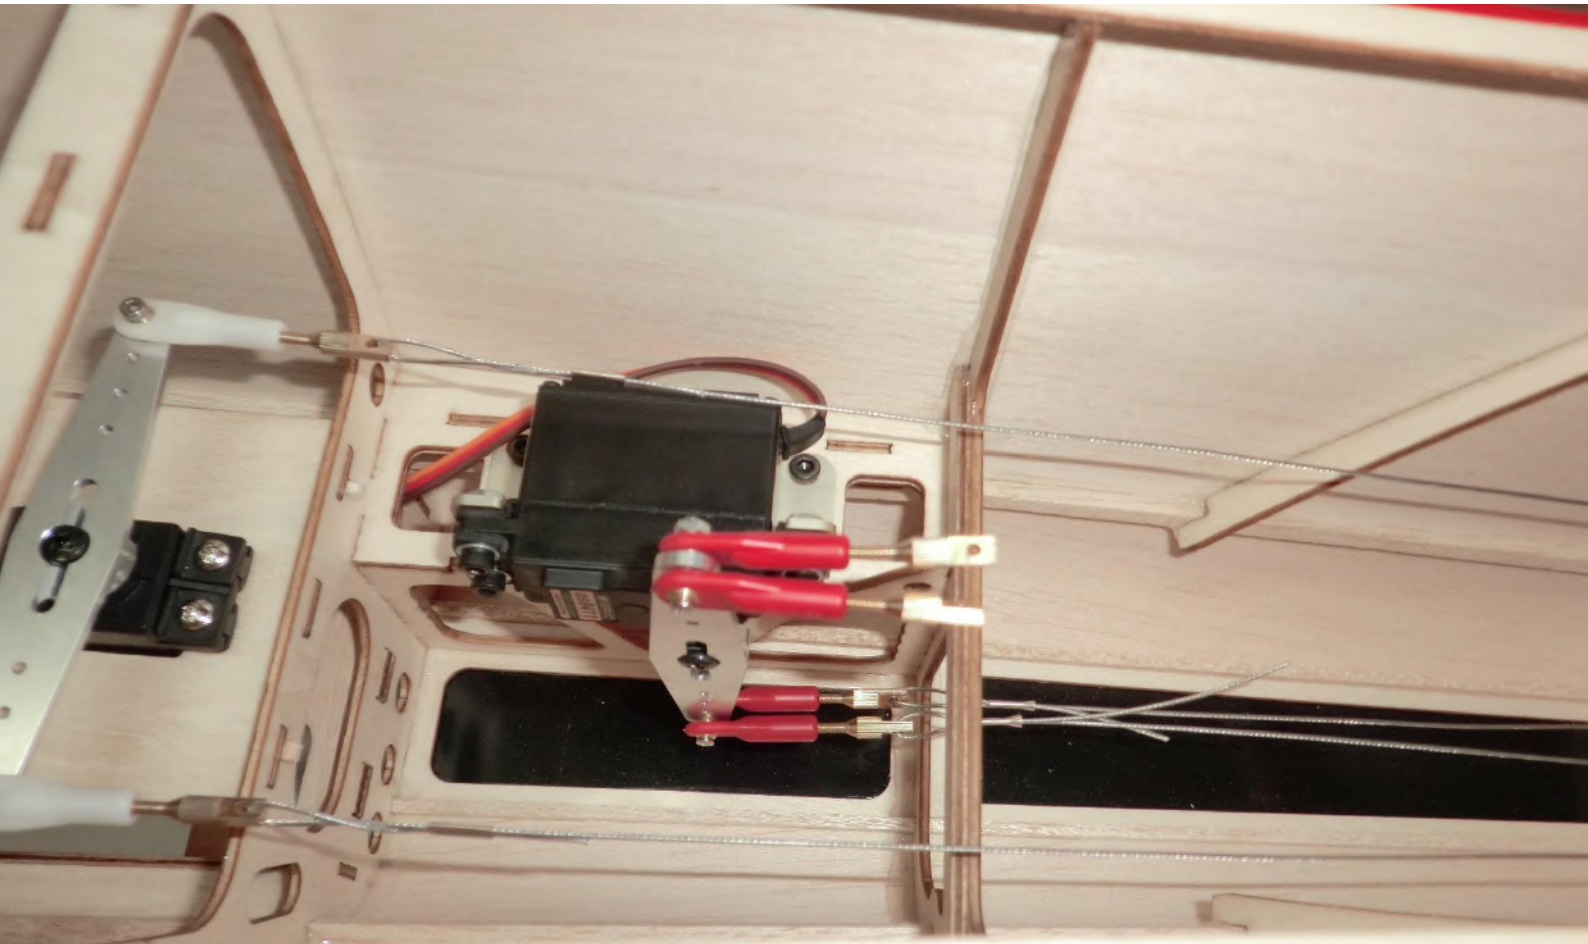

Elevator installation

 step 60

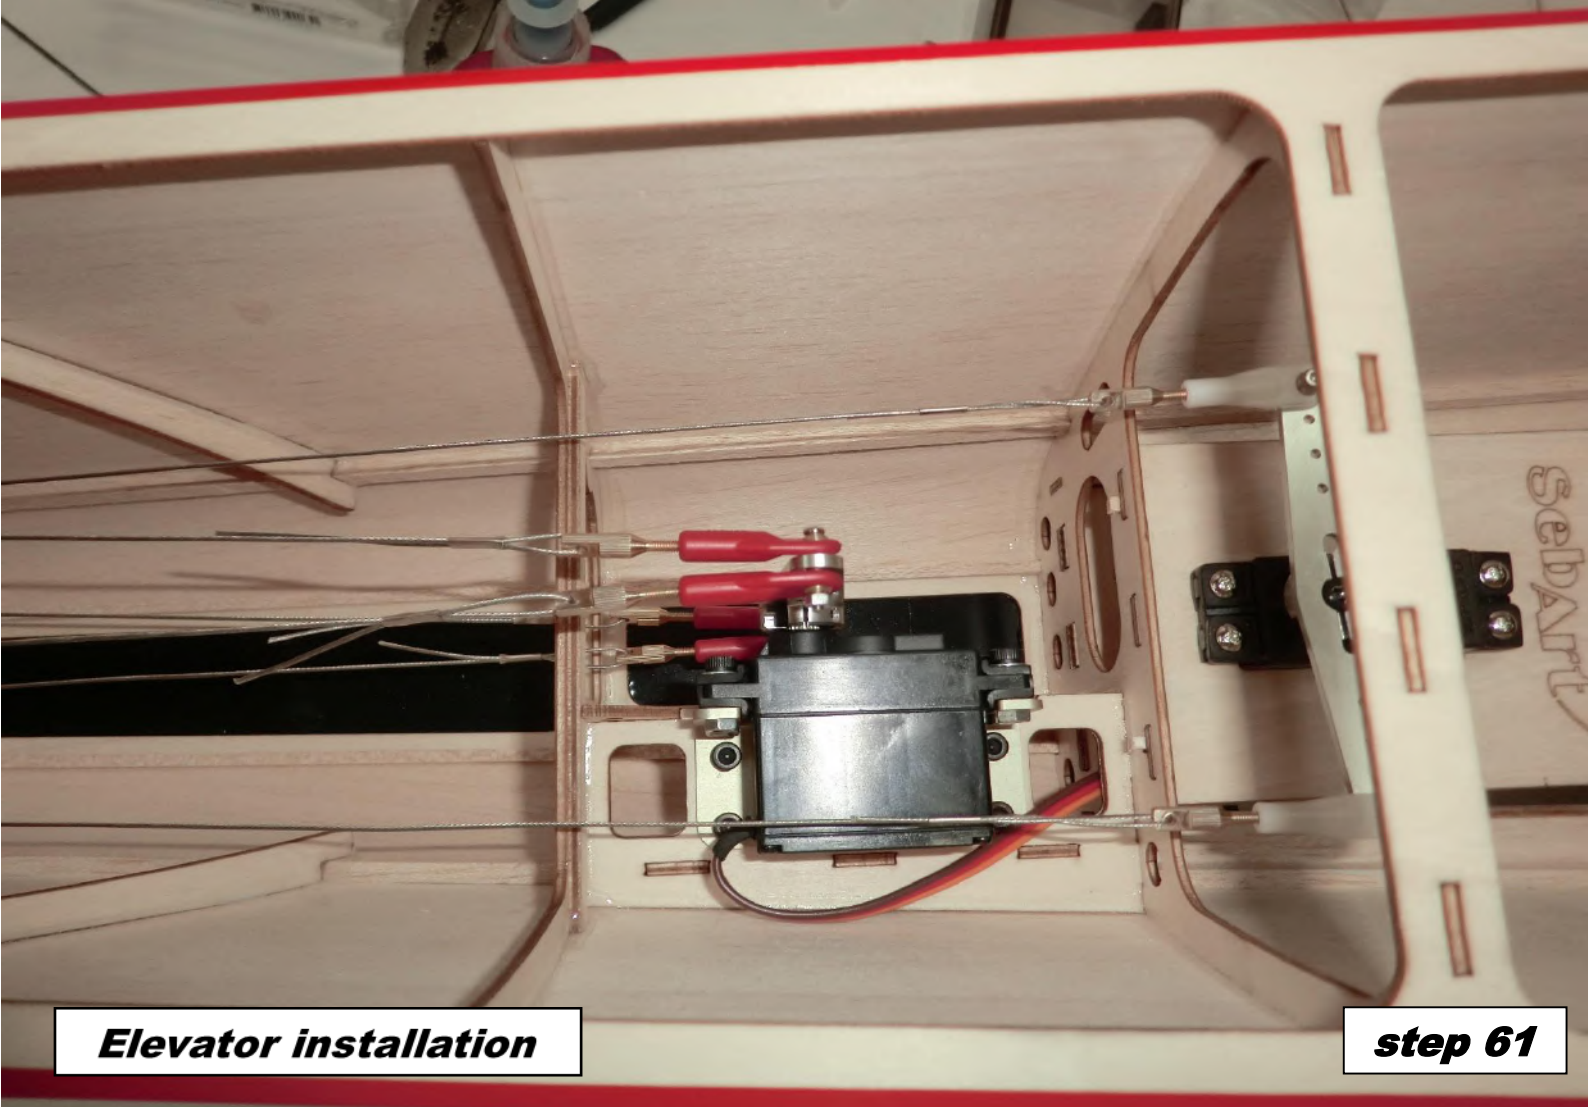

Elevator installation

step 61



Landing Gear installation

step 62



Landing Gear installation

step 63



Landing Gear installation

step 64



Landing Gear installation

step 65



Landing Gear installation

step 66



Landing Gear installation

step 67



 
Landing Gear installation

step 68




Landing Gear installation

step 69

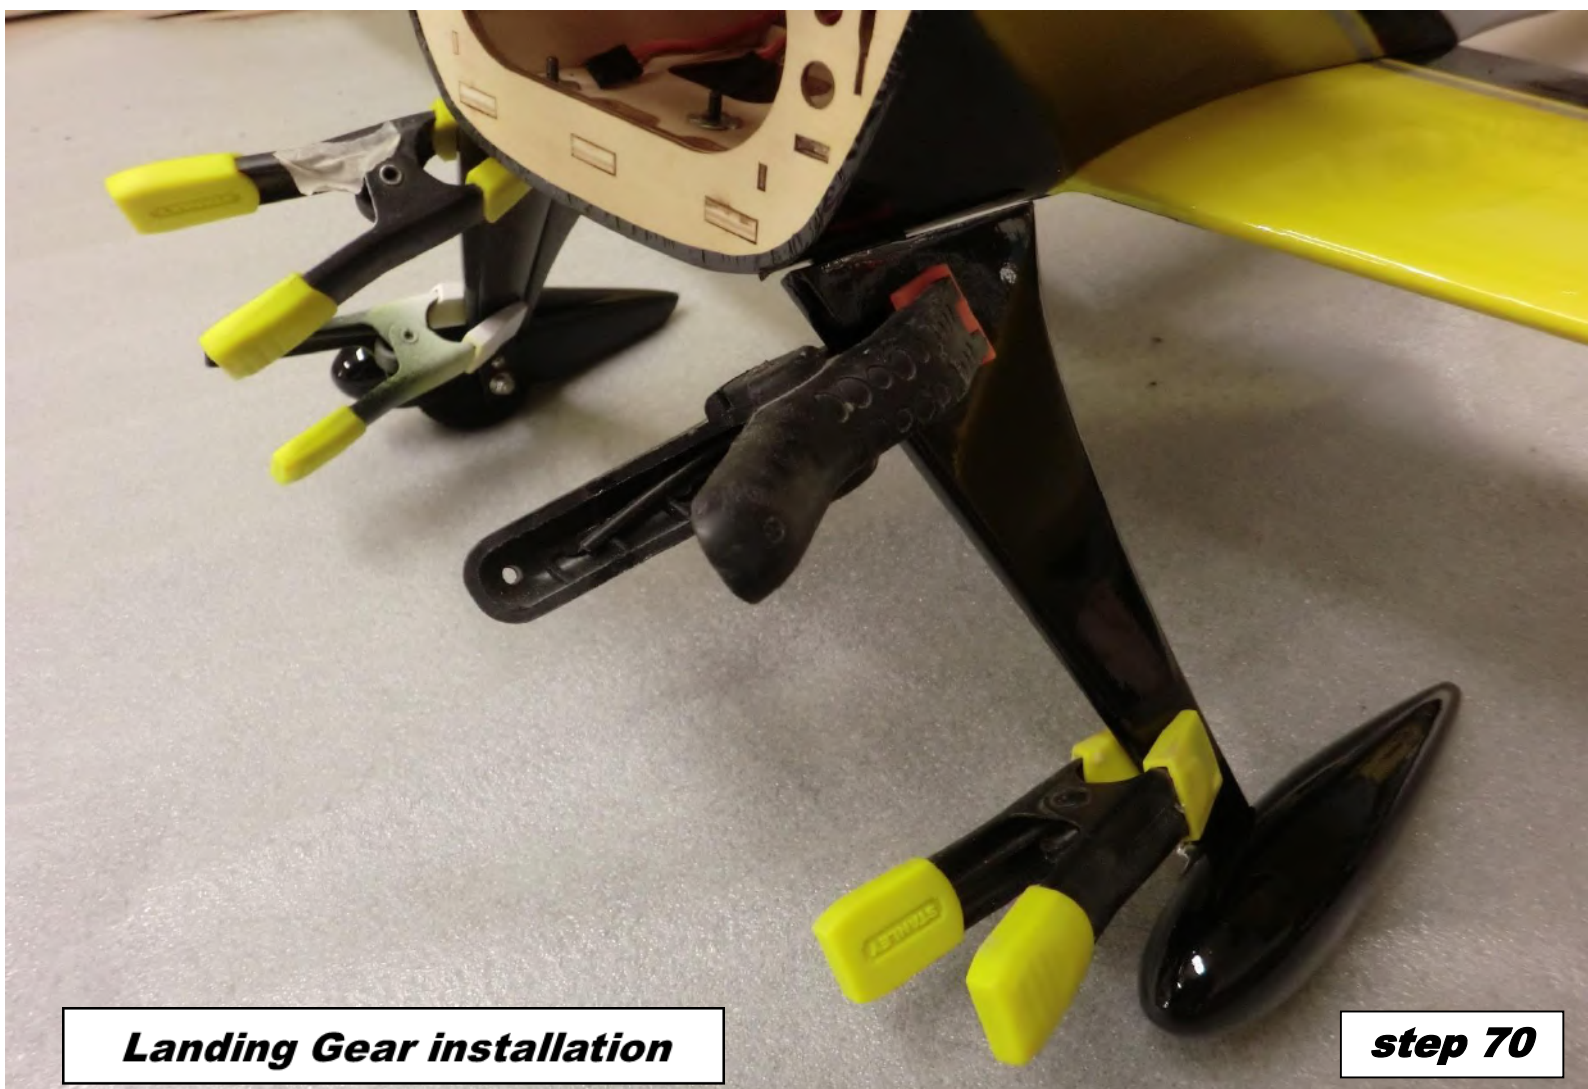


Landing Gear installation

 step 70

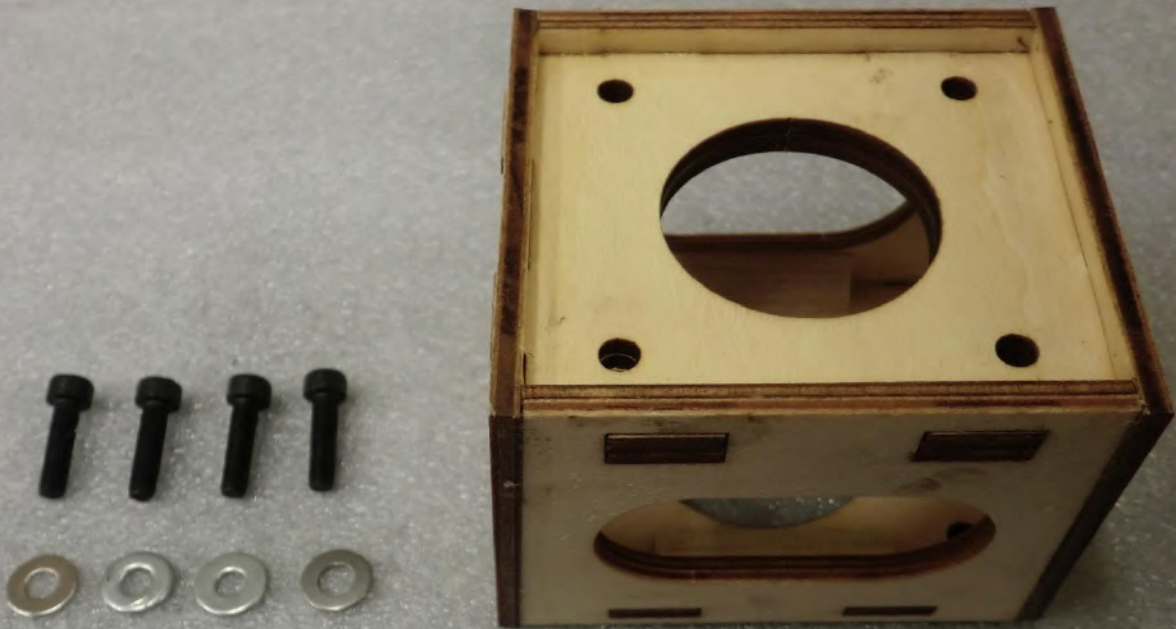

Electric motor version

 step 71

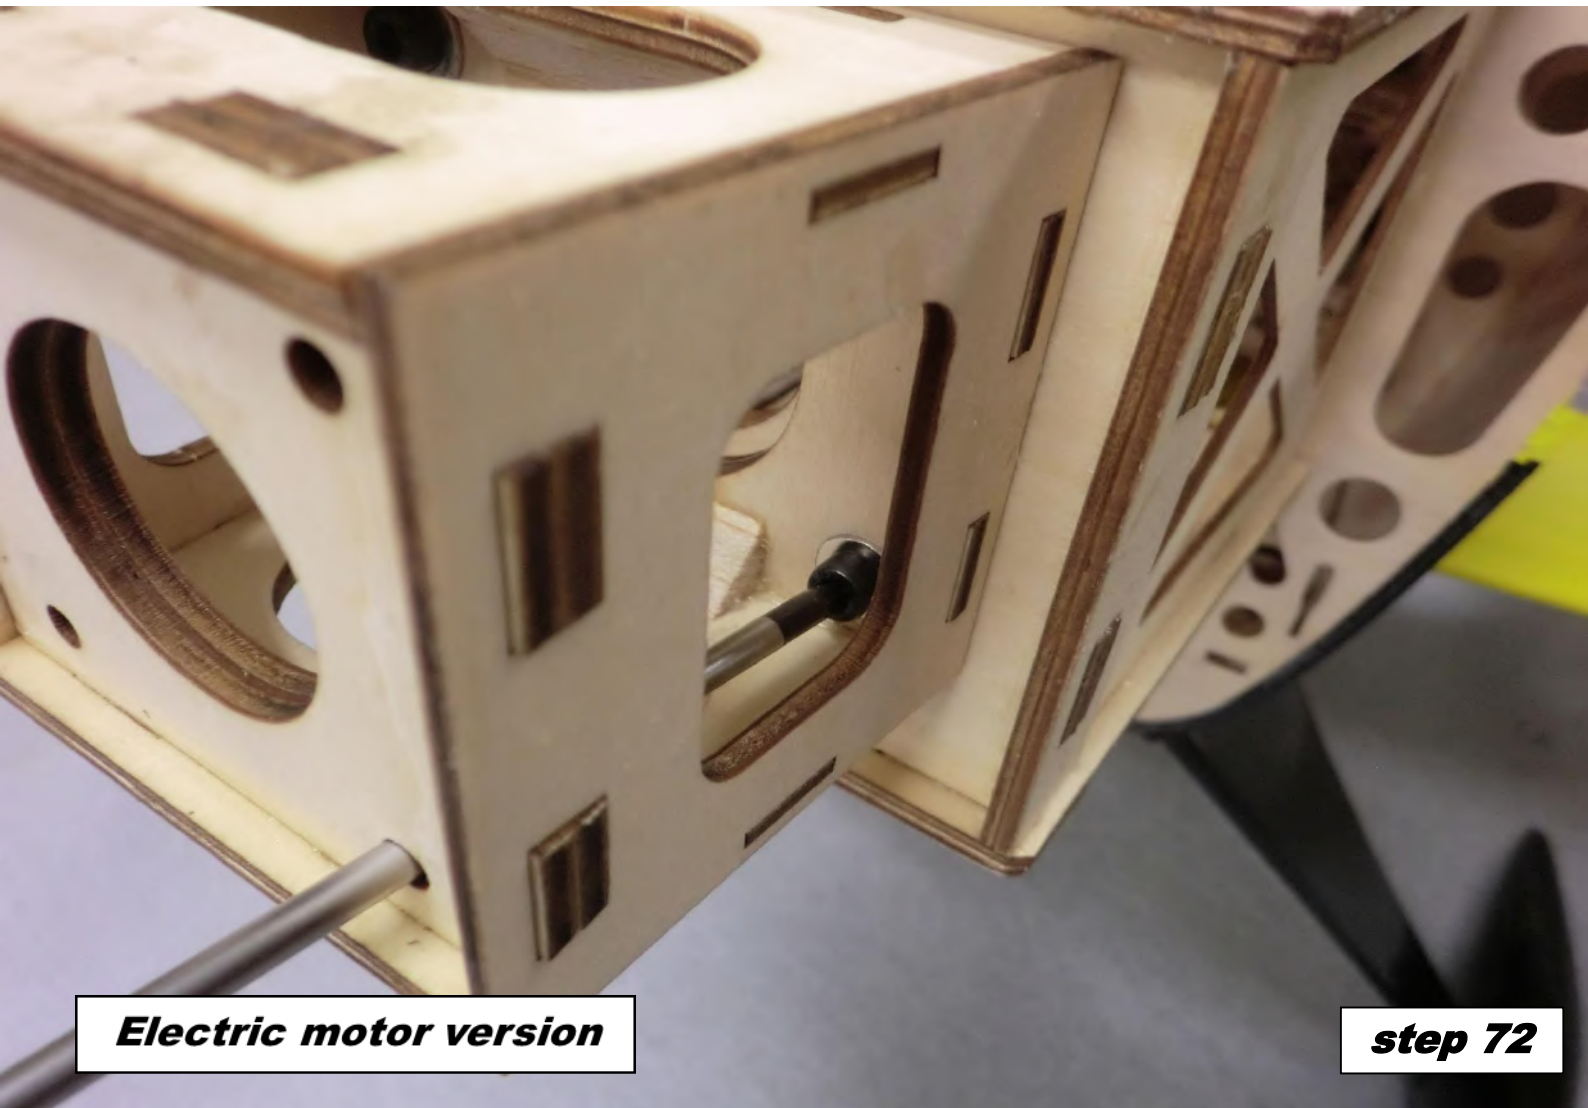


Electric motor version

step 72




Electric motor version

 step 73

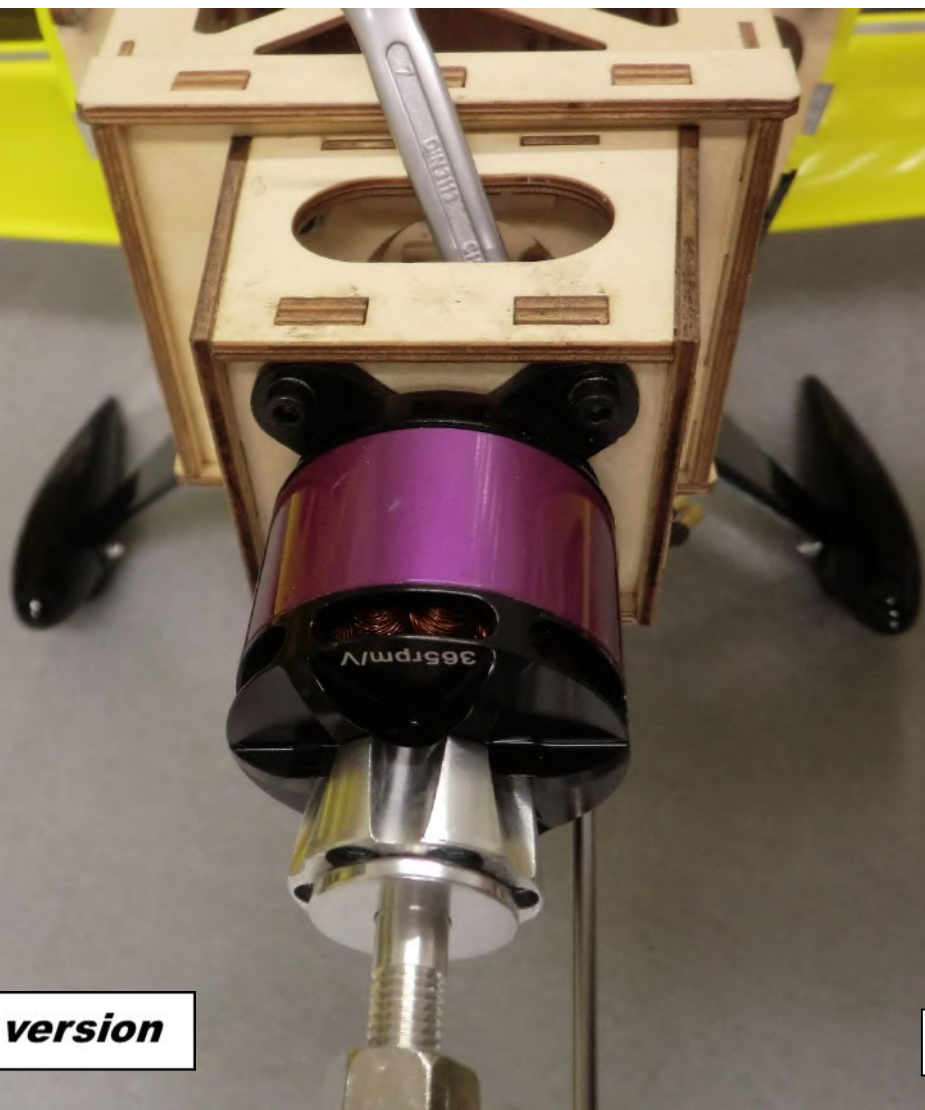


Electric motor version

 step 74

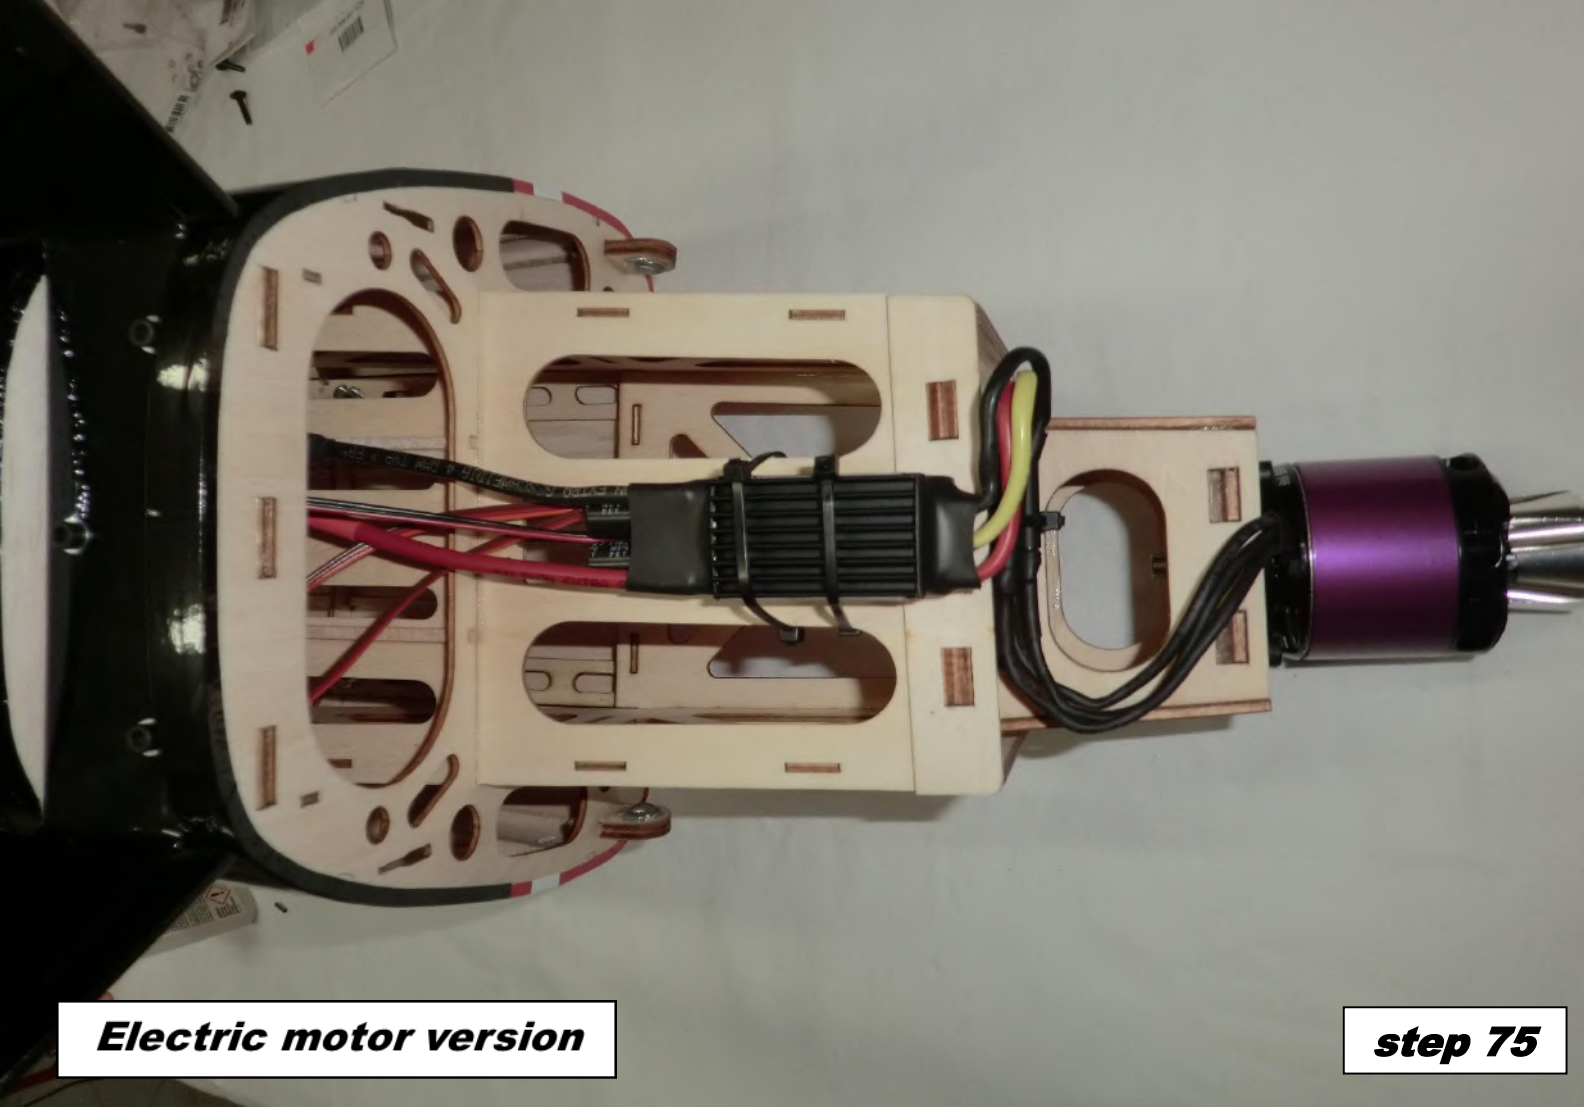


Electric motor version

 step 75

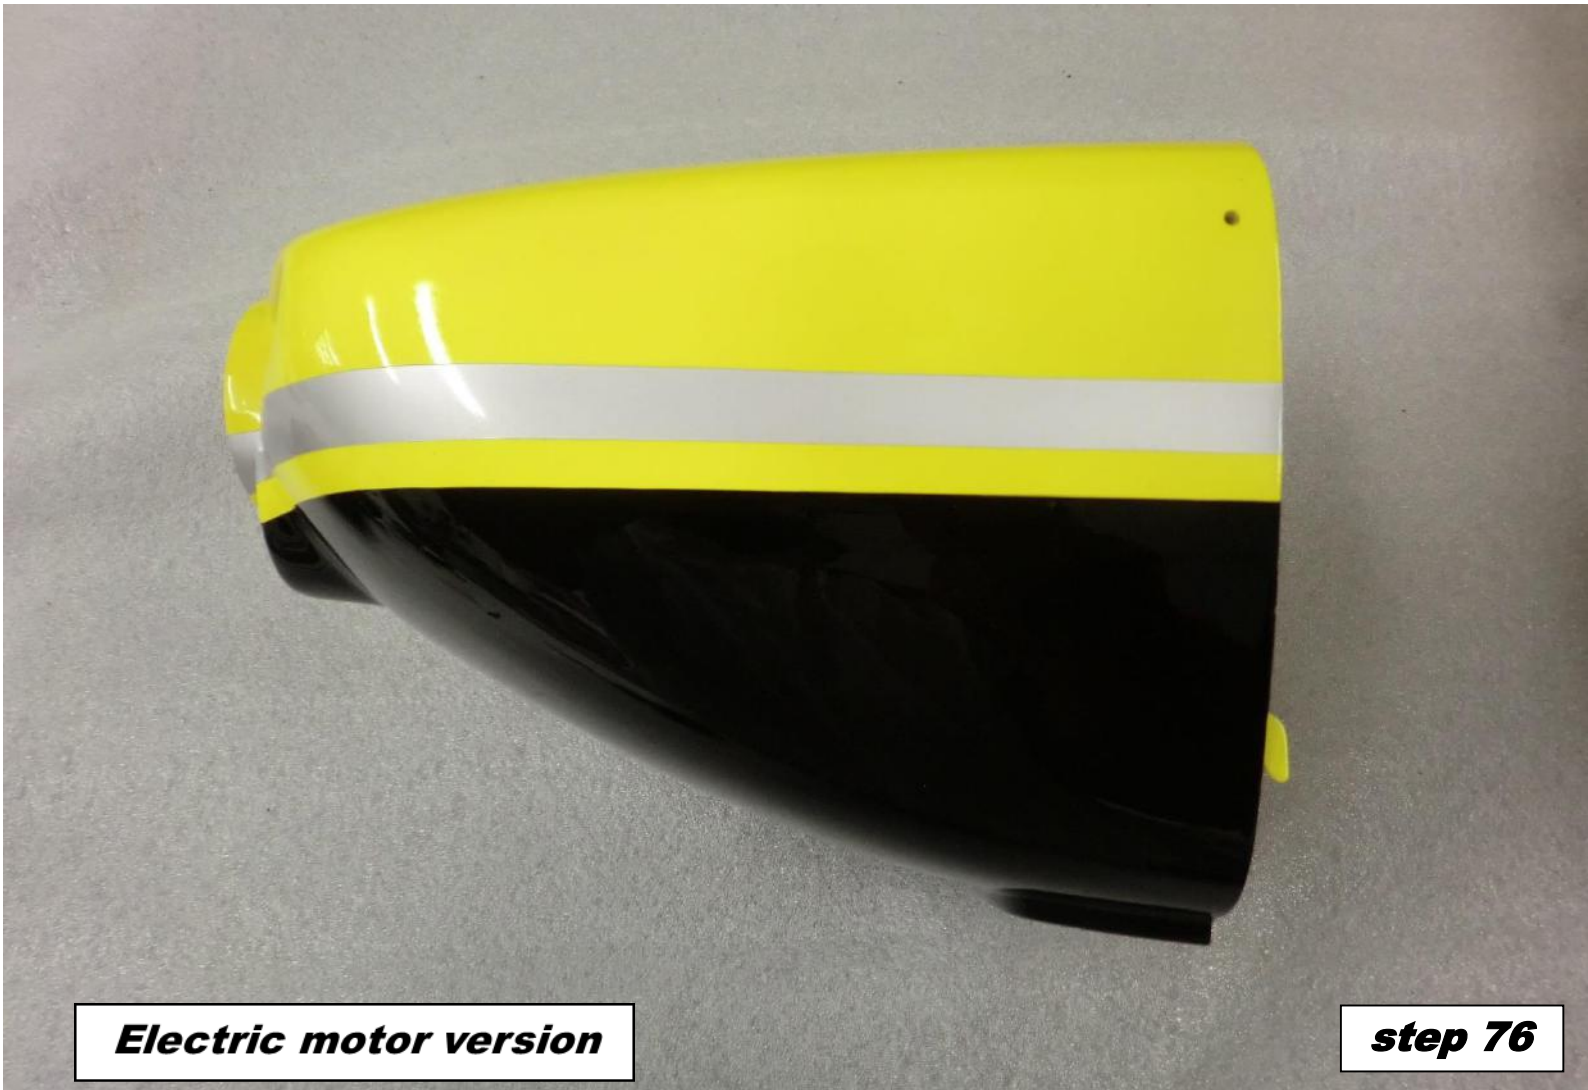


Electric motor version

 step 76

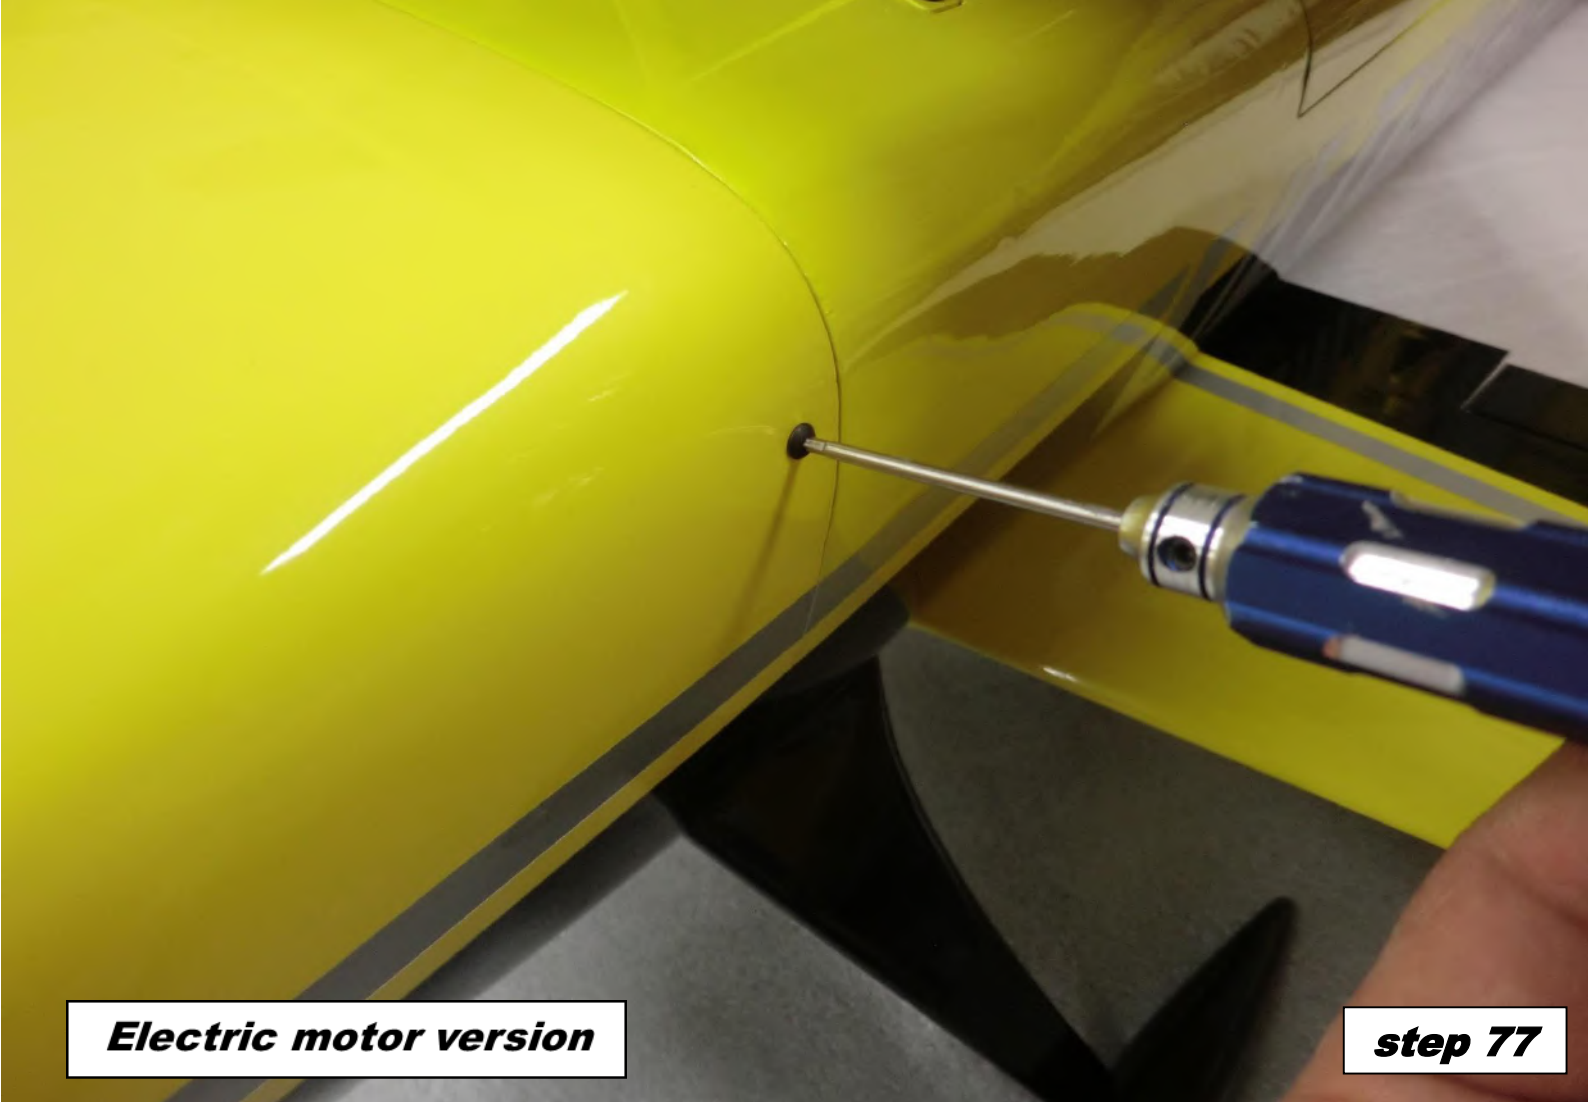


Electric motor version

 step 77

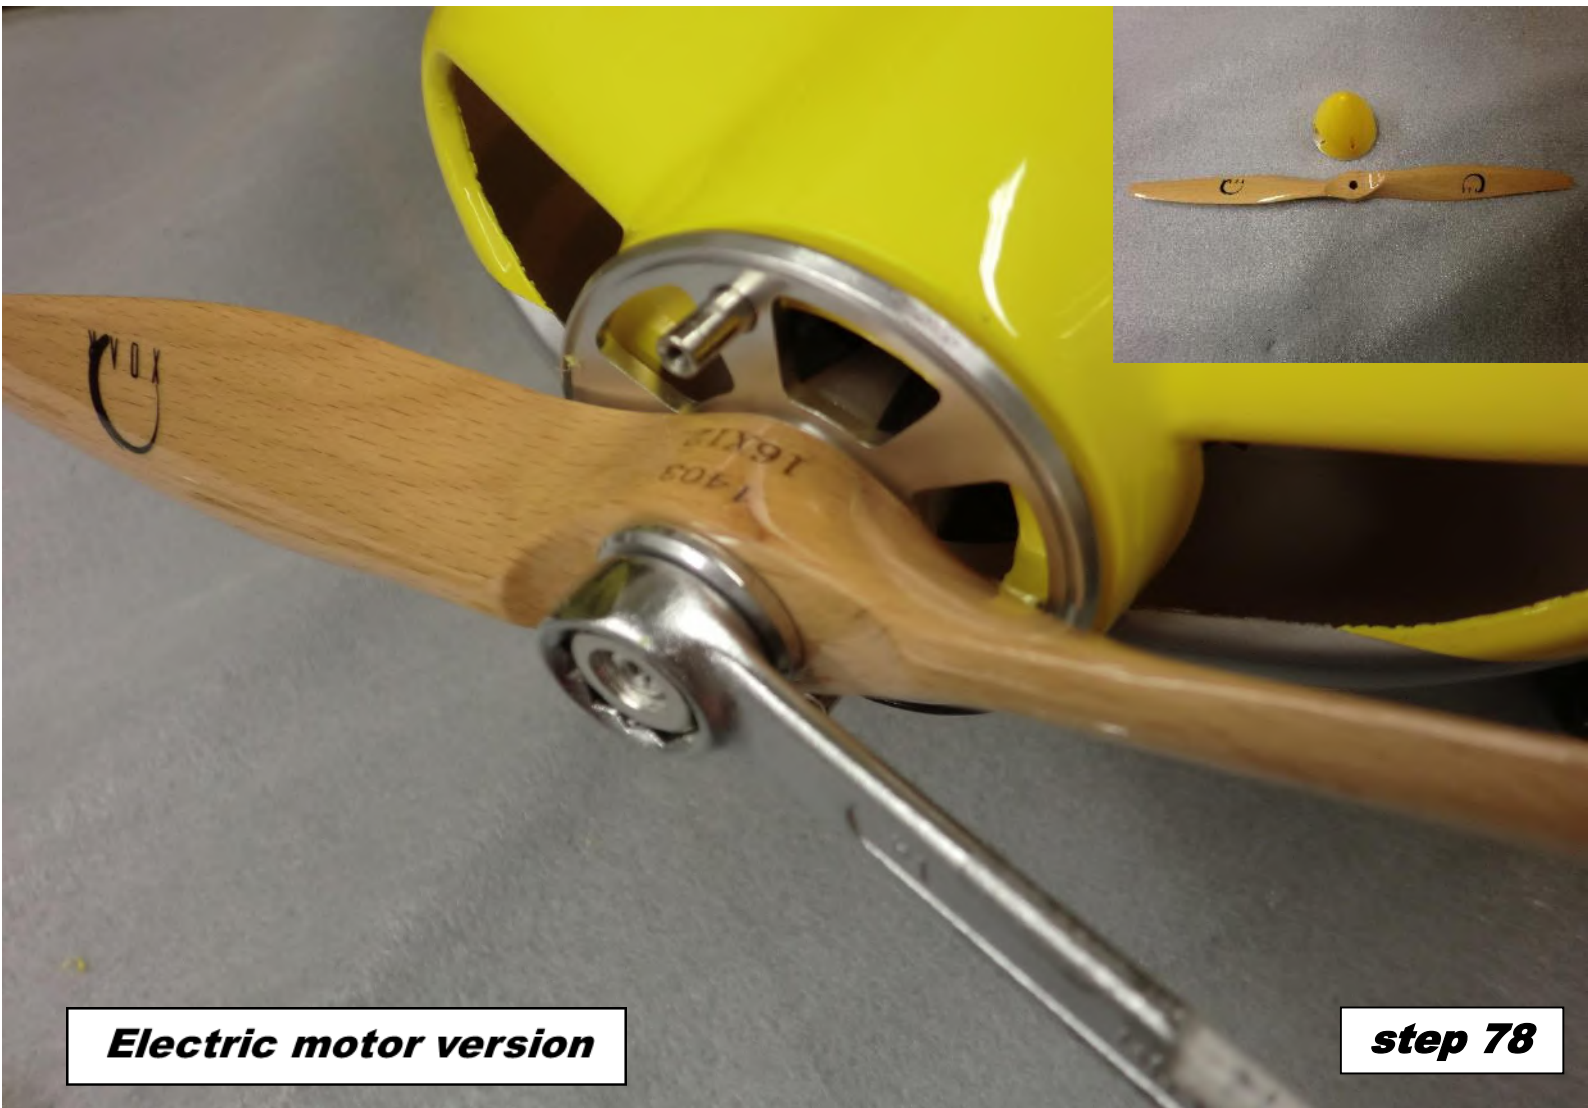


Electric motor version

 step 78

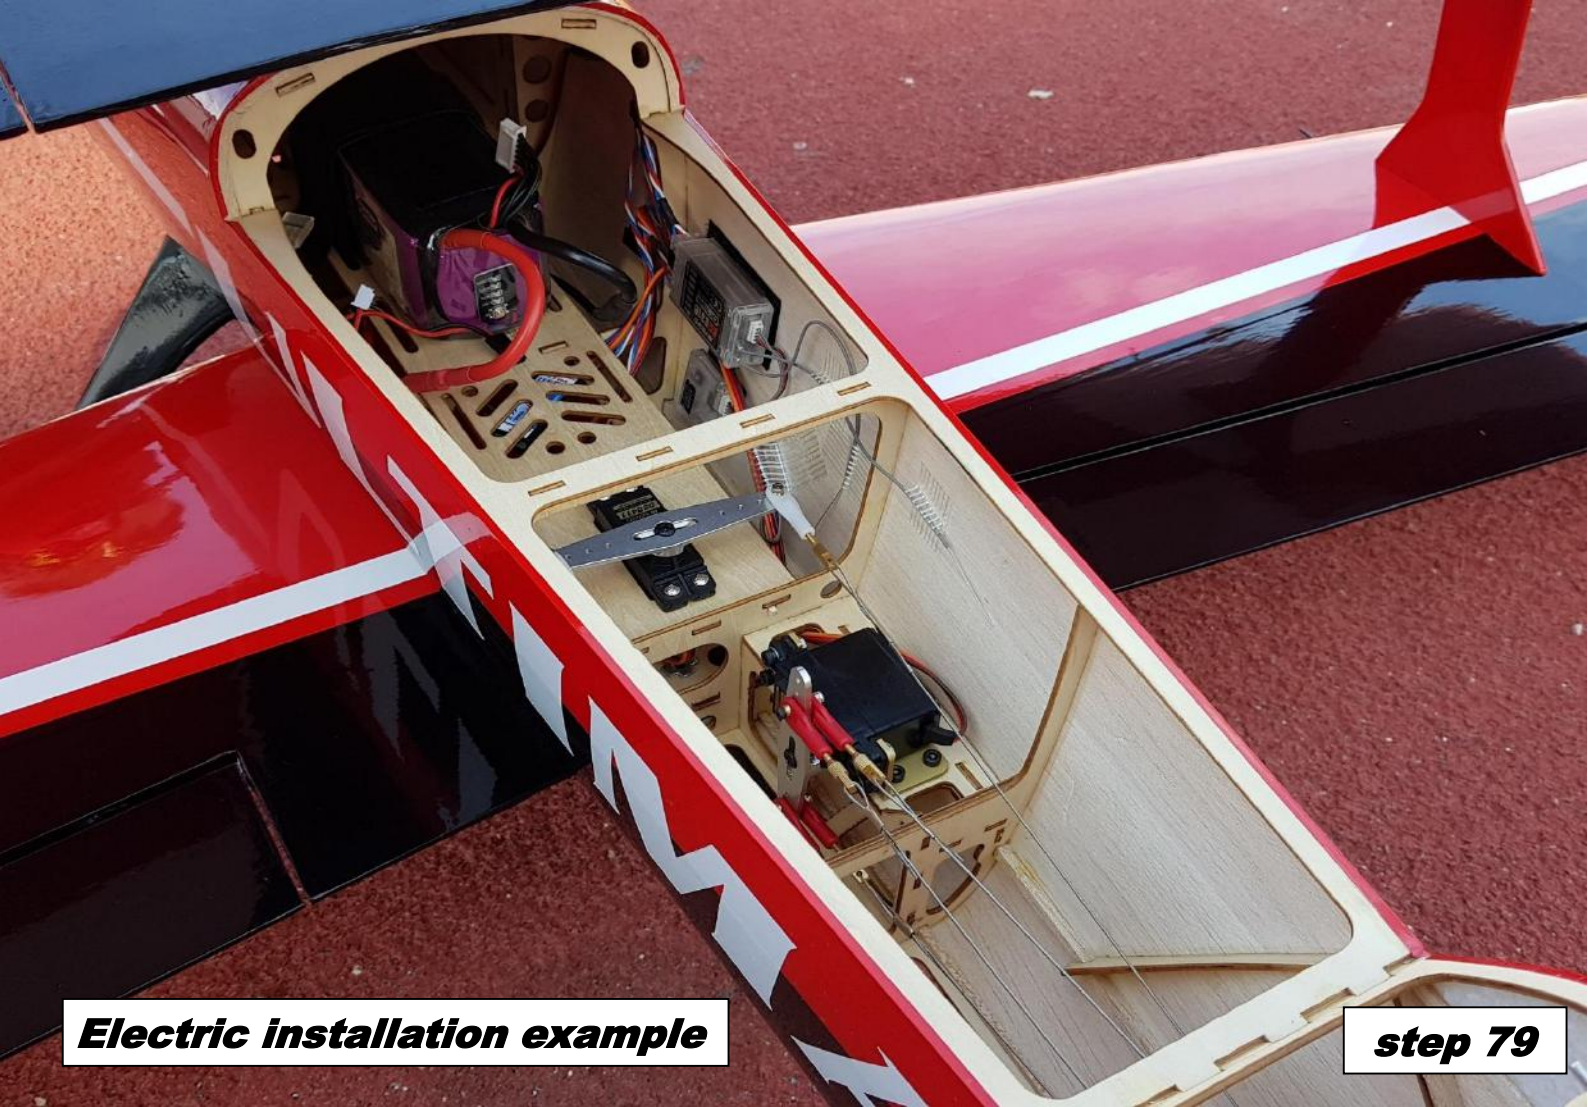

Electric installation example

 step 79

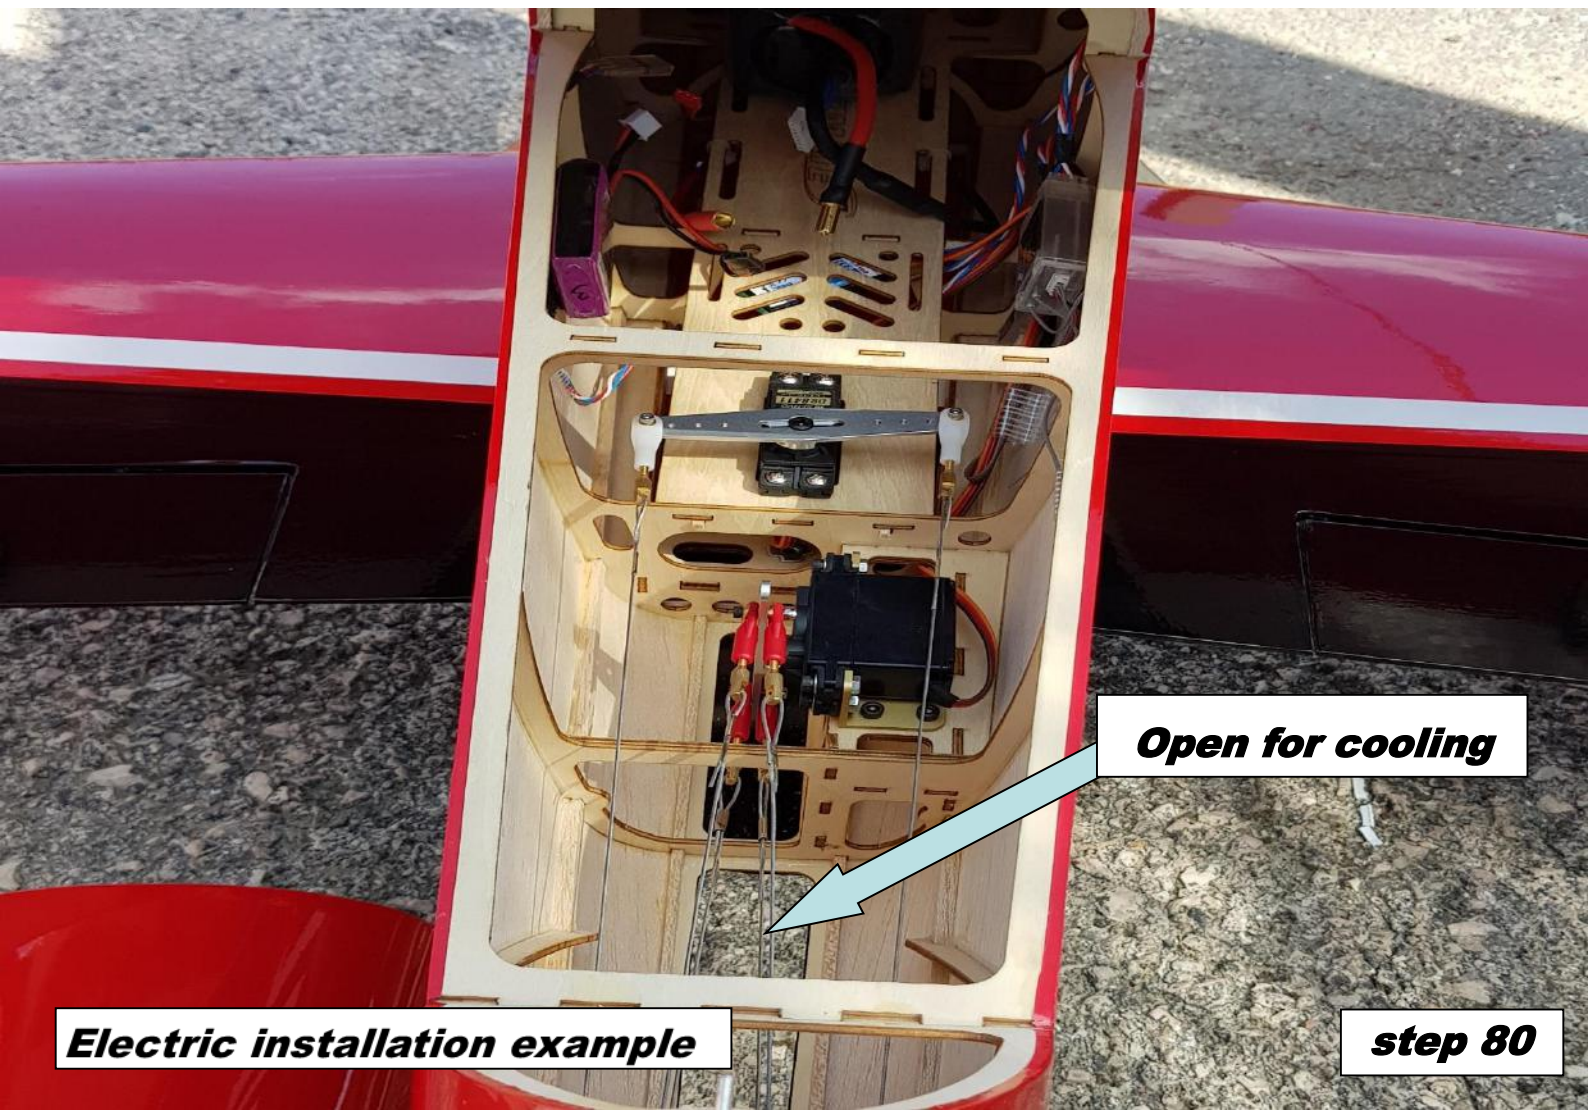

Open for cooling

Electric installation example

step 80



